
HP 8671B SYNTHESIZED CW GENERATOR 2.0—18.0 GHz

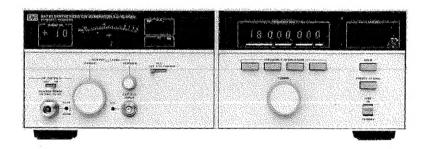





HP 8671B SYNTHESIZED CW GENERATOR

2.0 — 18.0 GHz



© Copyright HEWLETT-PACKARD COMPANY 1985 1501 PAGE MILL ROAD, PALO ALTO, CALIFORNIA, U.S.A.

OPERATING MANUAL PART NO. 08671-90019
Operating and Service Manual Part No. 08671-90017
Microfiche Part No. 08671-90018

Printed: December 1985

CONTENTS

P	age		$_{ m Page}$
Section I		ALC Control	
GENERAL INFORMATION		Frequency Control	. 3-8
Introduction	1.1	Level Control	
		Peak-Norm Adjustment	3-15
Specifications		RF ON/OFF Switch	
Safety Considerations		Remote (HP-IB) Operation	3-17
Instruments Covered by This Manual		HP-IB Compatibility	
Manual Changes Supplement		Remote Mode	
Description		Local Mode	
Options		Addressing	
Mechanical Options		Data Messages	
Accessories Supplied		Receiving Data Messages	
Accessories Available		The Complete Data Message	
Electrical Equipment Available		The Abbreviated Data Message	
Recommended Test Equipment	1-3		
		Receiving the Clear Message	
Section II		Receiving the Trigger Message	
INSTALLATION		Receiving the Remote Message	
Introduction	2-1	Receiving the Local Message	
Initial Inspection		Receiving the Local Lockout Message	3-20
Preparation For Use		Receiving the Clear Lockout/Set Local	
Power Requirements		Message	
Line Voltage and Fuse Selection		Receiving the Pass Control Message	
A Power Cables		Sending the Require Service Message	
HP-IB Address Selection		Sending the Status Byte Message	
Interconnections		Sending the Status Bit Message	
Mating Connectors	- 4	Receiving the Abort Message	
Operating Environment		Operator's Checks	
		Basic Functional Checks	3-22
Bench Operation		HP-IB Checks	3-26
Rack Mounting			
Storage and Shipment		Section IV	
Environment		PERFORMANCE TESTS	
Packaging	2-4	Introduction	4-1
		Abbreviated Performance Test	
Section III		Calibration Cycle	
OPERATION		Performance Test Record	
Introduction	3.1	Equipment Required	
Panel Features		Test Procedures	
Operating Characteristics		Frequency Range and Resolution Test	
		Frequency Switching Time Test	
Local Operation		Output Level, High Level Accuracy	. 4.0
Remote (HP-IB) Operation			111
Operator's Checks		and Flatness Test	
Operator's Maintenance			
Turn-On Instructions		Output Level Switching Time Test	
Turn-On		Harmonics, Subharmonics & Multiples Test	4-23
Frequency Standard Selection		Non-Harmonically Related Spurious	
Simplified Operation		Signals Test	
Frequency		Power Line Related Spurious Signals Test	
Output Level		Single-Sideband Phase Noise Test	
ALC	3-3	Internal Time Base Aging Rate	4-36

ILLUSTRATIONS

Figu	Page Page	Figu	re Pag	e
1-1.	HP Model 8671B Accessories Supplied, and	4-1.	Frequency Range and Resolution	
	Options 907, 908, and 909 1-0		Test Setup 4-2	2
		4-2.	Frequency Switching Time Test Setup 4-	6
		4-3.	Frequency Switching Time Measurement	
2-1.	Line Voltage and Fuse Selection 2-2		Waveform 4-8	8
2-2.	Power Cable and Mains Plug Part	4-4.	Amplitude Recover Measurement	
	Numbers 2-2		Waveform 4-16	0
2-3.	HP-IB Address Switches Shown as Set by	4-5.		
	the Factory 2-3		and Flatness Test Setup 4-12	2
2-4.	Hewlett-Packard Interface Bus	4-6.	Low Level Accuracy Test Setup 4-1'	
	Connection 2-5	4-7.	Output Level Switching Time Test Setup 4-20	
		4-8	Output Level Switching Time	_
			Measurement Waveform 4-22	2
/!\ 3-1.	Front Panel Features 3-2	4-9.	Harmonics, Subharmonics, and Multiples	
3-2.	Rear Panel Features 3-2		Test Setup 4-23	3
3-3.	External Leveling with a Crystal Detector 3-4	4-10.	Non-Harmonically Related Spurious	
3-4.	External Leveling with a Power Meter 3-5		Test Setup 4-26	6
3-5.		4-11.	Power Line Related Spurious Signals	
	Arguments 3-10		Test Setup 4-29	9
3-6.	Frequency Switching Time Showing	4-12.	Single-Sideband Phase Noise Test Setup 4-32	
	Worst Case 3-11		Internal Time Base Aging Rate	_
3-7.	Frequency Checks Test Setup 3-23		Test Setup	6
	TAB	IFS		
Tab			70	
		Tabl	~ ~ ~	
1-1.	Specifications	3-4.	Programming Quick Reference Guide 3-21	l
		4 4	O + + I 1 I 1 1 1 1 1 1 1	
1-0.	Recommended Test Equipment 1-8	4-1.	Output Level, High Level Accuracy	
2-1.	Allowable HP-IB Address Codes 2-3	4.0	and Flatness Test Record 4-14	
0.1			Low Level Accuracy Test Record 4-19	ł
	Operating Characteristics	4-3.	Harmonics, Subharmonics & Multiples	
	Index of Detailed Operating Instructions 3-1	4.4	Test Record 4-25	
პ-პ.	Message Reference Table 3-18	4-4.	Performance Test Record 4-38	3

SAFETY CONSIDERATIONS

GENERAL

This product and related documentation must be reviewed for familiarization with safety markings and instructions before operation.

This product is a Safety Class I instrument (provided with a protective earth terminal).

BEFORE APPLYING POWER

Verify that the product is set to match the available line voltage and the correct fuse is installed.

SAFETY EARTH GROUND

An uninterruptible safety earth ground must be provided from the main power source to the product input wiring terminals, power cord, or supplied power cord set.

WARNINGS

Any interruption of the protective (grounding) conductor (inside or outside the instrument) or disconnecting the protective earth terminal will cause a potential shock hazard that could result in personal injury. (Grounding one conductor of a two conductor outlet is not sufficient protection.) In addition, verify that a common ground exists between the unit under test and this instrument prior to energizing either unit.

Whenever it is likely that the protection has been impaired, the instrument must be made inoperative and be secured against any unintended operation.

If this instrument is to be energized via an autotransformer (for voltage reduction) make sure the common terminal is connected to neutral (that is, the grounded side of the mains supply).

Servicing instructions are for use by servicetrained personnel only. To avoid dangerous electric shock, do not perform any servicing unless qualified to do so.

Adjustments described in the manual are performed with power supplied to the instrument

while protective covers are removed. Energy available at many points may, if contacted, result in personal injury.

Capacitors inside the instrument may still be charged even if the instrument has been disconnected from its source of supply.

For continued protection against fire hazard, replace the line fuse(s) only with 250V fuse(s) of the same current rating and type (for example, normal blow, time delay, etc.). Do not use repaired fuses or short circuited fuseholders.

SAFETY SYMBOLS



Instruction manual symbol: the product will be marked with this symbol when it is necessary for the user to refer to the instruction manual (see Table of Contents for page references).



Indicates hazardous voltages.



Indicates earth (ground) terminal.

WARNING

The WARNING sign denotes a hazard. It calls attention to a procedure, practice, or the like, which, if not correctly performed or adhered to, could result in personal injury. Do not proceed beyond a WARNING sign until the indicated conditions are fully understood and met.

CAUTION

The CAUTION sign denotes a hazard. It calls attention to an operating procedure, practice, or the like, which, if not correctly performed or adhered to, could result in damage to or destruction of part or all of the product. Do not proceed beyond a CAUTION sign until the indicated conditions are fully understood and met.

General Information HP 8671B

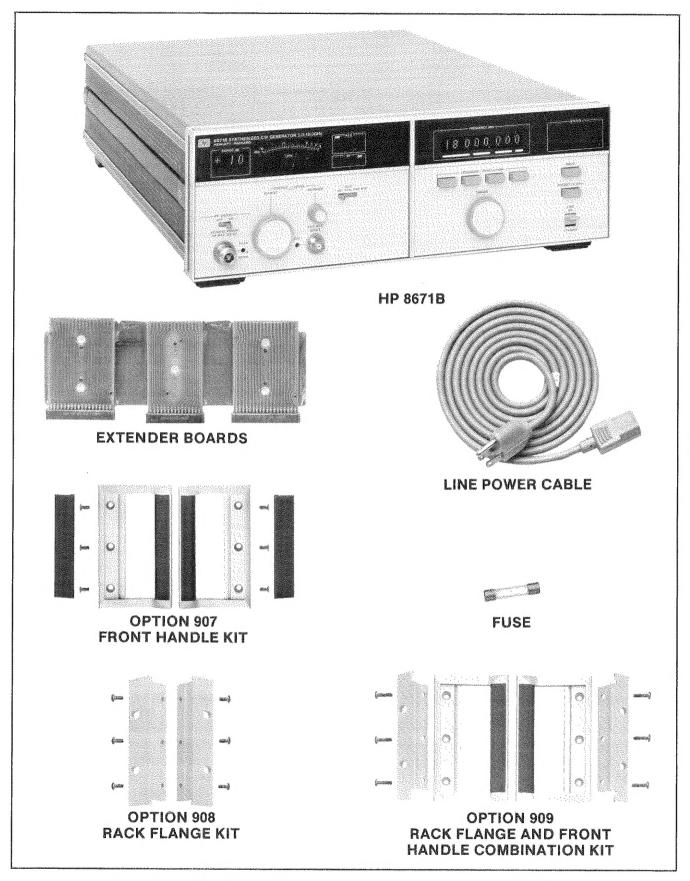


Figure 1-1. HP Model 8671B Accessories Supplied, and Options 907, 908, and 909

HP 8671B General Information

SECTION I GENERAL INFORMATION

1-1. INTRODUCTION

This manual contains information required to install, operate, test, adjust and service the Hewlett-Packard 8671B Synthesized CW Generator. Figure 1-1 shows the CW Generator with all of its externally supplied accessories.

The 8671B Operating and Service manual has eight sections. The subjects addressed are:

Section I. General Information

Section II, Installation

Section III, Operation

Section IV, Performance Tests

Section V, Adjustments

Section VI, Replaceable Parts

Section VII, Manual Changes

Section VIII, Service

Two copies of the operating information are supplied with the CW Generator. One copy is in the form of an Operating Manual. The Operating Manual is a copy of the first four sections of the Operating and Service Manual. The Operating Manual should stay with the instrument for use by the operator. Additional copies of the Operating Manual can be ordered separately through your nearest Hewlett-Packard office. The part number is listed on the title page of this manual.

Also listed on the title page of this manual, below the manual part number, is a microfiche part number. This number may be used to order 100 x 150 millimetre (4 x 6 inch) microfilm transparencies of this manual. Each microfiche contains up to 96 photo-duplicates of the manual pages. The microfiche package also includes the latest Manual Changes supplement, as well as all pertinent Service Notes.

1-2. SPECIFICATIONS

Instrument specifications are listed in Table 1-1. These specifications are the performance standards or limits against which the instrument may be tested. Supplemental characteristics are listed in Table 1-2. Supplemental characteristics are not warranted specifications, but are typical characteristics included as additional information for the user.

1-3. SAFETY CONSIDERATIONS

This product is a Safety Class I instrument, that is, one provided with a protective earth terminal. The CW Generator and all related documentation should be reviewed for familiarization with safety markings and instructions before operation. Refer to the Safety Considerations page found at the beginning of this manual for a summary of the safety information. Safety information for installation, operation, performance testing, adjustment, or service is found in appropriate places throughout this manual.

1-4. INSTRUMENTS COVERED BY THIS MANUAL

Attached to the rear panel of the instrument is a serial number plate. The serial number is in the form: 0000A00000. The first four digits and the letter are the serial number prefix. The last five digits are the suffix. The prefix is the same for identical instruments; it changes only when a configuration change is made to the instrument. The suffix however, is assigned sequentially and is different for each instrument. The contents of this manual apply directly to instruments having the serial number prefix(es) listed under SERIAL NUMBERS on the title page.

1-5. MANUAL CHANGES SUPPLEMENT

An instrument manufactured after the printing of this manual may have a serial number prefix that is not listed on the title page. This unlisted serial number prefix indicates that the instrument is different from those documented in this manual. The manual for this newer instrument is accompanied by a Manual Changes supplement. The supplement contains "change information" that explains how to adapt this manual to the newer instrument.

In addition to change information, the supplement may contain information for correcting errors in the manual. To keep the manual as current and as accurate as possible, Hewlett-Packard recommends that you periodically request the latest Manual Changes supplement. The supplement is identified with the manual print date and part number, both General Information HP 8671B

MANUAL CHANGES SUPPLEMENT (cont'd)

of which appear on the manual title page. Complimentary copies of the supplement are available from Hewlett-Packard.

For information concerning a serial number prefix that is not listed on the title page or in the Manual Changes supplement, contact your nearest Hewlett-Packard office.

1-6. DESCRIPTION

The HP 8671B Synthesized CW Generator has a frequency range of 2.0 to 18.0 GHz. The output is leveled and calibrated from +8 dBm to -120 dBm. Frequency, output level, and ALC modes can be remotely programmed via HP-IB.

The frequency can be tuned with one of four frequency resolutions. Tuning resolutions of 100 MHz, 1 MHz, 10 kHz or 1 kHz are selected by front panel pushbuttons. The 1 kHz tuning resolution will give tuning resolutions of 1 kHz for frequencies from 2.0 to 6.2 GHz, 2 kHz for frequencies from 6.2 to 12.4 GHz, and 3 kHz for frequencies from 12.4 to 18.599997 GHz.

Long-term frequency stability is dependent on the time base, either an internal or external reference oscillator. The internal crystal reference oscillator operates at 10 MHz while an external oscillator may operate at 5 or 10 MHz.

The output of the CW Generator is exceptionally flat due to the action of the internal automatic leveling control (ALC) loop. External leveling control using a diode detector or a power meter to sense output power can be used to level the output at a remote load.

The output level is set using the OUTPUT LEVEL RANGE switch and the OUTPUT LEVEL VERNIER. The OUTPUT LEVEL RANGE switch changes the output level in 10 dB increments (+10 to -110 dB). The OUTPUT LEVEL VERNIER is then used to adjust the output level over a continuous 13 dB range (-10 to +3 dBm). The output level is read by adding the vernier setting to the range setting.

The CW Generator is compatible with HP-IB to the extent indicated by the following codes: SH1, AH1, T6, TE0, L4, LE0, SR1, RL2, PP2, DC1, DT0, and C0. An explanation of the compatibility code can be found in IEEE Standard 488 (1978).

"IEEE Standard Digital Interface for Programmable Instrumentation" or the identical ANSI Standard MC1.1. For more detailed information relating to programmable control of the CW Generator, refer to Remote Operation, Hewlett-Packard Interface Bus in Section III of this manual.

1-7. OPTIONS

1-8. Mechanical Options

The following options may have been ordered and received with the CW Generator. If they were not ordered with the original shipment and are now desired, they can be ordered from the nearest Hewlett-Packard office using the part numbers included in each of the following paragraphs.

Option 907 (Front Handle Kit). Ease of handling is increased with the front panel handles. The Front Handle Kit part number is 5061-9689.

Option 908 (Rack Flange Kit). The CW Generator can be solidly mounted to the instrument rack using the flange kit. The Rack Flange Kit part number is 5061-9677.

Option 909 (Rack Flange and Front Handle Combination Kit). This is a unique part which combines both functions. It is not simply a front handle kit and a rack flange kit packaged together. The Rack Flange and Front Panel Combination Kit part number is 5061-9683.

1-9. ACCESSORIES SUPPLIED

The accessories supplied with the CW Generator are shown in Figure 1-1.

- a. The line power cable is supplied in several configurations, depending on the destination of the original shipment. Refer to Power Cables in Section II of this manual.
- b. An additional fuse is shipped only with instruments that are factory configured for 100/120 Vac operation. This fuse has a 1.5A rating and is for reconfiguring the instrument for 220/240 Vac operation.
- c. Four extender boards are supplied for performance testing, adjusting, and troubleshooting the instrument.
 - 1. One 30-pin (15 x 2) extender board, HP part number 08672-60117.

HP 8671B General Information

ACCESSORIES SUPPLIED (cont'd)

- 2. Two 36-pin (18 x 2) extender boards, HP part number 08672-60020.
- 3. One 3-section, 30-pins (15 x 2) per section, extender board, HP part number 08672-60016 (for use in the A2 Assembly).

1-10. ACCESSORIES AVAILABLE

Chassis Slide Mount Kit. This kit is not available as a factory installed option. However, it is extremely useful when the CW Generator is rack mounted. Access to internal circuits and components or the rear panel is possible without removing the CW Generator from the rack. Order HP part number 1494-0059. If the instrument rack mounting slides are to be mounted in a standard EIA rack, then an adapter (HP Part No. 1494-0061) is needed. The slides without the adapter can be directly mounted in the HP system enclosures.

1-11. ELECTRICAL EQUIPMENT AVAILABLE

The CW Generator has an HP-IB interface and can be used with any HP-IB compatible computing controller or computer for automatic systems applications.

The HP-IB Controller is needed for Flatness and ALC adjustment procedures and for performance testing. Controllers that are supported by this manual include the HP 9826A, 9836A, and HP 85B/82937A.

The HP 11720A Support Kit is available for maintaining and servicing the CW Generator. It includes a special test extender board, cables and adapters.

1-12. RECOMMENDED TEST EQUIPMENT

Table 1-3 lists the test equipment recommended for testing, adjusting and servicing the CW Generator. Essential requirements for each piece of test equipment are described in the Critical Specifications column. Other equipment can be substituted if it meets or exceeds these critical specifications. General Information

Table 1-1. Specifications (1 of 3)

Note: Specifications apply after 1-hour warm-up, over the temperature range 0 to 55° C (except specifications for RF output level which apply over the range 15 to 35° C). Specifications for output flatness and absolute level accuracy apply only when internal leveling is used.

Electrical Characteristics	Performance Limits	Conditions
FREQUENCY		
Range	2.0—18.0 GHz	
	(Overrange to 18.599997 GHz)	
	(a restaurage to account of the	
Resolution	1 kHz	2.0 to 6.2 GHz
	2 kHz	6.2 to 12.4 GHz
	3 kHz	12.4 to 18.0 GHz
		12.1 00 10.0 O112
Accuracy and Stability	Same as reference	
	oscillator	
Ci tali mi		
Switching Time	and No.	
Frequency (to be within the	<15 ms	
specified resolution -1 kHz in		
2.0 to 6.2 GHz range, etc.)		NAME OF THE PARTY
A		****
Amplitude (after switching	<15 ms	When switching within the same
frequency) to be within ±3 dB		range
of final level		
D-f		
Reference Oscillator	40 3 577	MA RESIDENCE AND A STATE OF THE
Frequency	10 MHz	No. of the second secon
Aging Rate	$<5 \times 10^{-10}/\text{day}$	After a 10 day warmup (typically
		24 hours in a normal operating
•	Market as a second seco	environment)
SPECTRAL PURITY		
Single-sideband Phase Noise		1 Hz bandwidth
2.0—6.2 GHz	<-58 dBc	10 Hz offset from carrier
	<-70 dBc	100 Hz offset from carrier
	<-78 dBc	1 kHz offset from carrier
	<-86 dBc	10 kHz offset from carrier
	<-110 dBc	100 kHz offset from carrier
		100 kHz offset from carrier
6.2—12.4 GHz	<-52 dBc	10 Hz offset from carrier
	<-64 dBc	100 Hz offset from carrier
	<-72 dBc	1 kHz offset from carrier
	<-80 dBc	10 kHz offset from carrier
	<-104 dBc	100 kHz offset from carrier
12.4—18.0 GHz	<-48 dBc	10 Hz offset from carrier
A MERCEL AND A STATE OF THE STA	<-60 dBc	10 Hz offset from carrier
	<-68 dBc	1 kHz offset from carrier
	<−68 dBc	10 kHz offset from carrier
•		
	<-100 dBc	100 kHz offset from carrier
Harmonics	<-25 dBc	At +8 dBm
Harmonics	_25 uBc	At To ubm

Table 1-1. Specifications (2 of 3)

	Performance Limits	Conditions
SPECTRAL PURITY (cont'd)		
Subharmonics and multiples	<-25 dBc	At +8 dBm
thereof		
Spurious Signals, non-harmon-	<-70 dBc	2.0—6.2 GHz
ically related, except power line	<-64 dBc	6.2—12.4 GHz
and fan rotation related	<-60 dBc	12.4—18.0 GHz
Power line related and fan rotation related within 5 Hz below line frequencies and multiples thereof		
2.0—6.2 GHz	<-50 dBc	<300 Hz offset from carrier
	<-60 dBc	300 Hz to 1 kHz offset from carrier
	<-65 dBc	>1 kHz offset from carrier
6.2—12.4 GHz	<-44 dBc	<300 Hz offset from carrier
	<-54 dBc	300 Hz to 1 kHz offset from carrier
	<-59 dBc	>1 kHz offset from carrier
12.4—18.0 GHz	<-40 dBc	<300 Hz offset from carrier
	<-50 dBc	300 Hz to 1 kHz offset from carrier
	<-55 dBc	>1 kHz offset from carrier
RF OUTPUT		
Output Power	+8 dBm to -120 dBm	+15 to +35°C
Remote Programming Absolute Level Accuracy		
2.0—6.2 GHz	±1.00 dB	+10 dB output level range
	±1.00 dB	0 dB output level range
	±1.50 dB	-10 dB output level range
	±1.70 dB	-20 dB output level range
	±1.90 dB	-30 dB output level range
	$\pm 1.90~\mathrm{dB}~\&~\pm 0.3~\mathrm{dB}$ per $10~\mathrm{dB}$ step	<-30 dB output level range
6.2—12.4 GHz	±1.25 dB	+10 dB output level range
	±1.25 dB	0 dB output level range
	±1.75 dB	-10 dB output level range
	±1.95 dB	-20 dB output level range
	±2.15 dB	-30 dB output level range
	$\pm 2.15~\mathrm{dB}~\&~\pm 0.3~\mathrm{dB}$ per 10 dB step	<-30 dB output level range
12.4—18.0 GHz	±1.50 dB	+10 dB output level range
	±1.50 dB	0 dB output level range
	±2.10 dB	-10 dB output level range
	±2.30 dB	-20 dB output level range
	±2.40 dB	-30 dB output level range
	±2.40 dB & ±0.4 dB per 10 dB step	<-30 dB output level range

General Information HP 8671B

Table 1-1. Specifications (3 of 3)

Electrical Characteristics	Performance Limits	Conditions							
RF OUTPUT (cont') Manual Absolute Level Accuracy	Add ±0.75 dB to remote programming absolute level accuracy	Absolute level accuracy specifications include allowances for detector linearity, temperature, flatness, attenuator accuracy, and measurement uncertainty.							
Remote Programming Output Level Resolution	1 dB	measurement uncertainty.							
Flatness (total variation)		0 dBm Range, +15°C to +35°C							
	1.50 dB 2.00 dB 2.50 dB	2.0 to 6.2 GHz 2.0 to 12.4 GHz 2.0 to 18.0 GHz							
Output Leveling Switching Time (to be within $\pm 1~dB$ of final level)	<20 ms								
REMOTE OPERATION Frequency	Programmable over the full ran	nge with the same resolution as manual							
Output Level RF Output ALC	Programmable in 1 dB steps, $+8$ to -120 dBm, plus 5 dB of overrange Programmable to either ON or OFF. Programmable for internal, crystal diode, or power meter leveling.								
Interface Function Codes	SH1, AH1, T6, TE0, L4, LE0, SR1, RL2, PP2, DC1, DT0, and C0.								
GENERAL Operating Temperature	0 to +55°C (see note at the begi	nning of this table).							
Power	100, 120, 220, or 240V, +5%, -16	0%, 48—66 Hz, 300 VA maximum.							
E.M.I.	Conducted and radiated interfe MIL-I-6181D.	rence is within the requirements of							
Net Weight	27.2 kg (60 lbs)								
Dimensions: Height Width Depth	146 mm (5.7 in.) 425 mm (16.8 in.) 620 mm (24.4 in.) For ordering cabinet accessorie System II	s, module sizes are 5-1/4H, 1 MW, 23D,							
Accessories	Power Cord, Operating and Ser extender boards.	rvice Manual, and four							

Table 1-2. Supplemental Characteristics

Supplemental characteristics are intended to provide information useful in applying the instrument by giving typical, but non-warranted, performance parameters.

FREQUENCY

Internal Reference: The internal reference oscillator accuracy is a function of time base calibration \pm aging rate, \pm temperature effects, and \pm line voltage effects. Typical temperature and line voltage effects are <1 x 10^{-7} /°C and <5 x 10^{-10} /+5% to -10% line voltage change. Reference oscillator is kept at operating temperature in STANDBY mode with the instrument connected to mains power. The aging rate is <1.5 x 10^{-9} /day after a 24 hour warmup.

External Reference Input: 5 or 10 MHz at a level of 0.1 to 1 Vrms into 50Ω . Stability and spectral purity of the microwave output will be partially determined by characteristics of the external reference frequency.

Reference Outputs: 10 MHz at a level of 0.2 Vrms into 50Ω . 100 MHz at a level of 0.2 Vrms into 50Ω .

SPECTRAL PURITY

Residual FM: $80\,\mathrm{Hz}\,\mathrm{rms}$ in a $50\,\mathrm{Hz}-15\,\mathrm{kHz}$ Post-detection bandwidth from $2-6.2\,\mathrm{GHz}$. Residual FM doubles in the $6.2-12.4\,\mathrm{GHz}$ range and triples in the $12.4-18.0\,\mathrm{GHz}$ range.

RF OUTPUT

For power settings >+3 dBm, changes in frequency from <10 GHz to >16 GHz may require a settling period for the power to stabilize at the set level. Spurious output oscillations may occur for settings above +8 dBm.

External leveling device characteristics will determine output flatness, absolute level accuracy, and switching time in external leveling modes.

Maximum Reverse Power: 1W RF input; 1 MHz-20 GHz, 0 Vdc.

Impedance: 50Ω .

Source SWR: ≤2.0:1.

General Information HP 8671B

Table 1-3. Recommended Test Equipment (1 of 3)

Instrument	Critical Specifications	Recommended Model	Use*					
AC Voltmeter	Range: 1 mV to $10V$ HP $400E$ Accuracy: $\pm 1.5\%$ of full scale $\pm 1.5\%$ of reading Frequency Response: 3 kHz to 3 MHz							
Attenuator, Fixed 3 dB	Range: dc to 1 GHz Accuracy: ± 0.5 dB SWR: < 1.3	HP 8491A Option 003	A					
Attenuator, Fixed 20 dB	Range: dc to 18 GHz Accuracy: ±1.0 dB SWR: < 1.6	HP 8491B Option 020	C, P					
Cable, Special Interconnect	See YTO Loop Phase Detector Adjustments in Section V	Locally Fabricated	A					
Controller, HP-IB	HP-IB compatibility as defined by IEEE Standard 488-1978 and the identical ANSI Standard MC1.1: SH1, AH1, T2, TE0, L2, LE0, SR0, RL0, PP0, DC0, DT0, and C1, 2, 3, 4, 5.	HP 85B/82937A or 9826A Option 011 or 9836A with BASIC 2.0 Operating System	C, A, T, P					
Crystal Detector	Frequency Range: 2 to 18 GHz Frequency Response: ±1.5 dB	HP 8470B Option 012	P, A					
Current Probe	Frequency Range: 2 to 35 MHz	HP 1110B	Α					
Digital Voltmeter (DVM)	Range: -60V to $+40 \text{V}$ dc Resolution: $100~\mu\text{V}$ on 1V dc range	HP 3456A or HP 3455A	А, Т					
Foam Pads (2 required)	43×58 cm (17 \times 23 in.), 5 cm (2 in.) thick		P					
Frequency Counter	Range: 2 to 18 GHz Resolution: 1 kHz 10 MHz Frequency Standard Output: ≥0.1 Vrms	HP 5343A	P, A, T					
Frequency Standard	Long Term Stability: Better than $10^{-10}/\mathrm{day}$	HP 5065A	P, A					
High Impedance Probe	Frequency: 400 MHz Output Impedance: 50Ω (compatible with Spectrum Analyzer).	HP 1121A	т					
Local Oscillator	Range: 2 to 18 GHz Level: +7 dBm Single Sideband Phase Noise and Spurious Signals: Same as HP 8340A	HP 8340A	P, A					
Logic State Analyzer	8 Bit Display, Triggerable	HP 1630A	Т					

Table 1-3. Recommended Test Equipment (2 of 3)

Instrument	Critical Specifications	Recommended Model	Use*
Logic Pulser	TTL compatible	HP 546A	Т
Mixer	Response: 2 to 18 GHz VSWR, LO: \leq 2.5:1 VSWR, RF: \leq 4.0:1	RHG DMS1—18 ¹	P, A
Oscilloscope	Bandwidth: 50 MHz Vertical Sensitivity: 50 mV/div Vertical Input: 50Ω ac or dc coupled External Trigger Capability	HP 1980B	P, A, T
Power Meter	Frequency: 2 to 18 GHz Range: +17 to -25 dBm	HP 436A	P, A, T
Power Sensor	Frequency: 2 to 18 GHz Input Impedance: 50Ω SWR: < 1.28 Range: $+17$ to -25 dBm Must be compatible with power meter	HP 8481A	P, A, T
Power Source, Variable Frequency AC	Range: 110 to 120 Vac Frequency: 52 to 58 Hz Accuracy \pm 2 Hz	California Instruments 501TC/800T ²	Р
Power Supply	0 to 40 Vdc	HP 6200B	A, T
Amplifier, 20 dB	Frequency: 100 kHz Gain: $20 \pm 5 \text{ dB}'$ Output Power: $> -10 \text{ dBm}$ Noise Figure: $< 5 \text{ dBm}$ Impedance: 50Ω	HP 8447A	P
Amplifier, 40 dB	Frequency: 100 kHz Gain: $45 \pm 5 \text{ dB}$ Output Power: $> -10 \text{ dBm}$ Impedance: 50Ω	HP 8447D and HP 8447E or HP 8447F	Р
Probe, 10:1	Must be compatible with the oscilloscope.	HP 10017A	A
Signal Generator	Output Level: -5 to -20 dBm at 240 MHz	HP 8640B or HP 8340A	А
Spectrum Analyzer (with Tracking Generator)	Frequency Range: 20 Hz to 300 kHz Frequency Span/Division: 20 Hz minimum Noise Sidebands: > 90 dB below CW signal, 3 kHz offset, 100 Hz IF bandwidth Input Level Range: -10 to -60 dBm Log Reference Control: 70 dB dynamic range in 10 dB steps Accuracy: ± 0.2 dB	HP 8556A/8552B/141T	A

Table 1-3. Recommended Test Equipment (3 of 3)

Instrument	Critical Specifications	Recommended Model	Use*			
Spectrum Analyzer	Frequency Range: 5 Hz to 50 kHz Resolution Bandwidth: 1 Hz minimum Frequency Span/Division: 5 Hz to 500 Hz Amplitude Range: 0 to -70 dB	HP 3580A	P, T			
Spectrum Analyzer	Frequency Range: 100 kHz to 22 GHz Frequency Span/Division: 2 kHz minimum Amplitude Range: +10 to -90 dBm Noise Sideband: > 75 dB down 30 kHz from signal at 1 kHz resolution bandwidth Resolution Bandwidth: 30 Hz to 300 kHz	HP 8566B	P, A			
Sweep Oscillator	Center Frequency: 150 to 200 MHz Center Frequency Resolution: 0.1 MHz Sweep Range: 10 and 200 MHz	HP 86222B/8620C or HP 8340A	A			
Termination	50Ω BNC	HP 11593A	A			
Termination	600Ω BNC Feedthrough	HP 11095A	P, A			
Test Coupler Adapter	See YTM Adjustments in Section V	Locally fabricated	Α			
Test Oscillator	Level: 0 to $3V$ into 50Ω or 300Ω Range: 60 Hz to 10 kHz	HP 3335A	A, T			

^{*} C = Operator's Check, P = Performance Tests, A = Adjustments, T = Troubleshooting

¹ RHG Electronics Laboratory, Inc., 161 East Industry Court, Deer Park, NY 11729, Tel. (516) 242-1100, TWX 510-227-6083.

² California Instruments, 5150 Convoy Street, San Diego, CA 92111, Tel. (714) 279-8620.

SECTION II

2-1. INTRODUCTION

This section provides the information needed to install the CW Generator. Included is information pertinent to initial inspection, power requirements, line voltage selection, power cables, interconnection, environment, instrument mounting, storage and shipment.

2-2. INITIAL INSPECTION

WARNING

To avoid hazardous electrical shock, do not perform electrical tests when there are signs of shipping damage to any portion of the outer enclosure (covers, panels, meters).

Inspect the shipping container for damage. If the shipping container or cushioning material is damaged, it should be kept until the contents of the shipment have been checked for completeness and the instrument has been checked mechanically and electrically. The contents of the shipment should be as shown in Figure 1-1. Procedures for checking electrical performance are given in Section IV. If the contents are incomplete, if there is mechanical damage or defect, or if the instrument does not pass the electrical performance test, notify the nearest Hewlett-Packard office. If the shipping container is damaged or the cushioning material shows signs of stress, notify the carrier as well as the Hewlett-Packard office. Keep the shipping materials for the carrier's inspection.

2-3. PREPARATION FOR USE

2-4. Power Requirements

The CW Generator requires a power source of 100, 120, 220 or 240 Vac, +5% to -10%, 48 to 66 Hz single phase. Power consumption is 300 VA maximum.

WARNINGS

This is a Safety Class I product (that is, provided with a protective earth terminal). An uninterruptible safety earth ground must be provided from the main

power source to the product input wiring terminals, power cord or supplied power cord set. Whenever it is likely that the protection has been impaired, the product must be made inoperative and be secured against any unintended operation.

If this instrument is to be energized via an external autotransformer, make sure the autotransformer's common terminal is connected to the neutral (that is, the grounded side of the mains supply).

2-5. Line Voltage and Fuse Selection

CAUTION

BEFORE PLUGGING THIS INSTRUMENT into the mains (line) voltage, be sure the correct voltage and fuses have been selected.

Verify that the line voltage selection cards and the fuses are matched to the power source. Refer to Figure 2-1, Line Voltage and Fuse Selection.


Fuses may be ordered under HP part numbers 2110-0003, 3.0A (250V) for 100/120 Vac operation and 2110-0043, 1.5A (250V) for 220/240 Vac operation.

2-6. Power Cables

WARNING

BEFORE CONNECTING THIS IN-STRUMENT, the protective earth terminal of this instrument must be connected to the protective conductor of the (mains) power cables. The mains plug shall only be inserted in socket outlets provided with a protective earth contact. The protective action must not be negated by the use of an extension cord (power cable) without a protective conductor (grounding).

This instrument is equipped with a three-wire power cable. When connected to an appropriate ac power receptacle, this cable grounds the instrument Installation HP 8671B

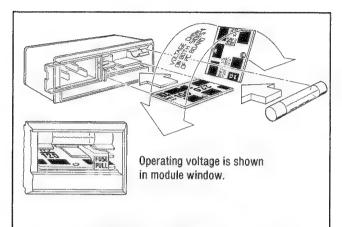

SELECTION OF OPERATING VOLTAGE

- Open cover door, pull the FUSE PULL lever and rotate to left. Remove the fuse.
- 2. Remove the Line Voltage Selection Card. Position the card so the line voltage appears at top-left corner. Push the card firmly into the slot.
- 3. Rotate the FUSE PULL lever to its normal position. Insert a fuse of the correct value in the holder. Close the cover door.

WARNING

To avoid the possibility of hazardous electrical shock, do not operate this instrument at line voltages greater than 126.5 Vac with line frequencies greater than 66 Hz [leakage currents at these line settings may exceed 3.5 mA].

Figure 2-1. Line Voltage and Fuse Selection

Power Cables (cont'd)

cabinet. The power cable plug shipped with each instrument depends on the country of destination. Refer to Figure 2-2 for the part numbers of power cables available.

2-7. HP-IB Address Selection /!\



In the CW Generator, the HP-IB talk and listen addresses and the parallel poll sense and response line can be selected by internal switches. Refer to Table 2-1 for a listing of talk and listen addresses. The address is factory set for a Talk address of "S" and a Listen address of "3". (In octal this is 23; in decimal this is 19.)

To change the HP-IB address or to select a different parallel poll response, proceed as follows:

WARNINGS

Internal switch settings should be changed only by service trained persons who are aware of the potential shock hazard of working on an instrument with protective covers removed.

To avoid hazardous electrical shock, the line (mains) power cable should be disconnected before attempting to change any internal switch settings.

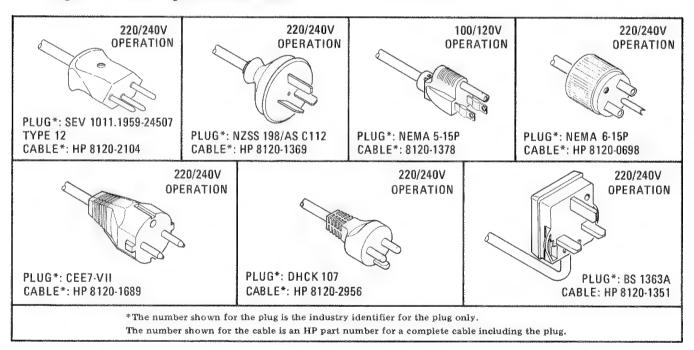


Figure 2-2. Power Cable and Mains Plug Part Numbers

Table 2-1	Allowable	HP-IR	Address	Codes
INDIAN PROPERTY.	THE CONTROL OF THE CO	111 113	nuui uou	UUUUU

Address Sw		Talk Address Char-	Listen Address Char-	Decimal Equiva- lent				
S1	\$2	acter	acter					
0	0	@	SP	0				
0	1	A		1				
0	2	В	11	2				
0	3	С	#	3				
0	4	D	\$	4				
0	5	E	%	5				
0	6	F	&	6				
0	7	G	,	7				
1	0	Н	(8				
1	1	l)	9				
1	2	J	*	10				
1	3	K		11				
1	4	L	1	12				
1	5	M		13				
1	6	N		14				
1	7	0	/	15				
2	0	P	0	16				
2	1	Q	1	17				
2	2	R	2	18				
2	3 - 3 - 3	S	3 3	19				
2	4	T	4	20				
2	5	U	5	21				
2	6	٧	6	22				
2	7	W	7	23				
3	0	Χ	8	24				
3	1	Y	9	25				
3	2	Z	:	26				
3	3	[i	27				
3	4	\	<	28				
3	5	1	=	29				
3	6	7	>	30				

HP-IB Address Selection (cont'd)

- a. Set the LINE switch to STANDBY. Disconnect the line power cable.
- b. Remove the CW Generator's top cover by removing the two plastic standoffs from the rear of the top cover and loosening the screw at the middle of the rear edge of the top cover. Then remove the A2 Assembly's protective cover. Refer to the Disassembly Procedures in Section VIII, Service Sheet A.
- c. Select the new address as shown in Table 2-1. The switches are shown in Figure 2-3. The HP-IB ADDRESS SELECT switch settings (for S1 and S2) are in the octal code. For example, the factory selected addresses are set to 23 (decimal 19). Therefore, the listen address is '3' and the talk address is 'S'.

- d. If the parallel poll sense or response switches are to be changed, remove any HP-IB cables or connectors from the HP-IB connector, and remove the HP-IB connector. Then remove the A2A9 Board Assembly.
- e. The PARALLEL POLL SENSE switch (S4) is set to either the OFF, 0 (zero) or 1 (one) position. The zero position provides a false (± 2.5 to 5 volts) output on the asserted HP-IB data line; the one position provides a true (0 to ± 0.4 V) output on the asserted HP-IB data line.
- f. The PPR (Parallel Poll Response) switch (S3) is set to select one of eight lines (one of 1 through 8 of the HP-IB data bus). The selected line passes the CW Generator's parallel poll response to the HP-IB controller.
- g. Re-install the A2A9 Assembly and HP-IB connector.
- h. Replace the A2 Assembly's internal cover, the instrument's top cover, and rear standoffs.

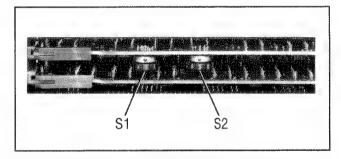


Figure 2-3. HP-IB Address Switches Shown as Set by the Factory

2-8. Interconnections

Interconnection data for the Hewlett-Packard Interface Bus is provided in Figure 2-4.

2-9. Mating Connectors

HP-IB Interface Connector. The HP-IB mating connector is shown in Figure 2-4. Note that the two securing screws are metric.

Coaxial Connectors. Coaxial mating connectors used with the CW Generator RF output should be 50Ω Type N male connectors.

2-10. Operating Environment

The operating environment should be within the following limitations:

Operating Environment (cont'd)

Temperat	u	r	e			4	P		٠											4		0	t	o	+	5	5°	\mathbf{C}
Humidity					,												٠			<	9	5	%	ľ	el	ai	i	/e
Altitude			9						<	<	1	5′	7(0	n	n	ei	tr	•е	s	(1	5,	0	00	f	ee	et)

NOTE

Specifications for RF Output apply only between +15 and +35°C.

2-11. Bench Operation

The instrument cabinet has plastic feet and fold-away tilt stands for convenience in bench operation. (The plastic feet are shaped to ensure self-aligning of the instruments when stacked.) The tilt stands raise the front of the instrument for easier viewing of the front panel.

2-12. Rack Mounting

WARNING

The CW Generator weighs 27.2 kg (60 lbs), therefore extreme care must be exercised when lifting to avoid personal injury. Use equipment slides when rack mounting the instrument.

Rack mounting information is provided with the rack mounting kits. If the kits were not ordered with the instrument as options, they may be ordered through the nearest Hewlett-Packard office. Refer to the paragraph entitled Mechanical Options in Section I.

2-13. STORAGE AND SHIPMENT

2-14. Environment

The instrument should be stored in a clean, dry environment. The following environmental limitations apply to both storage and shipment:

Temperature	. $-55 \text{ to } +75^{\circ}\text{C}$
Humidity	. <95% relative
Altitude 15,300 met	res (50,000 feet)

2-15. Packaging


Preparation for Packaging. Remove handles and/or rack mount flanges before packaging instrument for shipping.

Tagging for Service. If the instrument is being returned to Hewlett-Packard for service, please complete one of the blue repair tags located at the back of this manual and attach it to the instrument.

Original Packaging. Containers and materials identical to those used in factory packaging are available through Hewlett-Packard offices. Mark the container "FRAGILE" to assure careful handling. In any correspondence refer to the instrument by model number and full serial number.

Other Packaging. The following general instructions should be used for re-packaging with commercially available materials:

- a. Wrap the instrument in heavy paper or plastic. (If shipping to a Hewlett-Packard office or service center, complete one of the blue tags mentioned above and attach it to the instrument.)
- b. Use a strong shipping container. A double-wall carton made of 2.4 MPa (350 psi) test material is adequate.
- c. Use enough shock-absorbing material (75 to 100 mm layer; 3 to 4 inches) around all sides of the instrument to provide firm cushion and prevent movement in the container. Protect the front panel with cardboard.
 - d. Seal the shipping container securely.
- e. Mark the shipping container "FRAGILE" to assure careful handling.

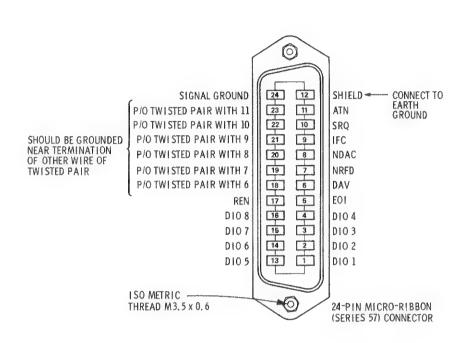

Logic Levels

The Hewlett-Packard Interface Bus Logic Levels are TTL compatible, i.e., the true (1) state is 0.0 Vdc to +0.4 Vdc and the false (0) state is +2.5 Vdc to +5.0 Vdc.

Programming and Output Data Format

Refer to Section III, Operation.

Mating Connector

HP 1251-0293; Amphenol 57-30240.

Mating Cables Available

HP 10833A, 1 metre (3.3 ft), HP 10833B, 2 metres (6.6 ft) HP 10833C 4 metres (13.2 ft), HP 10833D, 0.5 metres (1.6 ft)

Cabling Restrictions

- 1. A Hewlett-Packard Interface Bus system may contain no more than 2 metres (6 ft) of connecting cable per instrument.
- 2. The maximum accumulative length of connecting cable for any Hewlett-Packard Interface Bus system is 20.0 metres (65.6 ft).

Figure 2-4. Hewlett-Packard Interface Bus Connection

·				
		·		

SECTION III OPERATION

3-1. INTRODUCTION

This section provides complete operating information for the CW Generator. Included are both simplified and detailed operating instructions, detailed descriptions of the front and rear panel, local and remote operator's checks, and operator's maintenance.

3-2. Panel Features

Front and rear panel features are described in detail in Figures 3-1 and 3-2.

3-3. Operating Characteristics

Table 3-1 briefly summarizes the major operating characteristics of the CW Generator. This table is not intended to be a complete listing of all operations and ranges, but gives a general idea of the instrument's capabilities. For more information on the CW Generator's capabilities, refer to Table 1-1, Specifications, and Table 1-2, Supplemental Characteristics. For information on HP-IB capabilities, refer to Table 3-3, Message Reference Table.

3-4. Local Operation

Information covering front panel operation of the CW Generator is given in the sections described below. To quickly learn the operation of the instrument, begin with Operating Characteristics and Simplified Operation. (Operator's Checks can also be used to gain familiarity with the instrument.) Once familiar with the general operation of the instrument, use the Detailed Operating Instructions as a reference for more complete operating information.

Turn-On Information. Instructions relating to the CW Generator turn-on procedure and frequency standard selection are presented to acquaint the user with the general operation of the instrument.

Simplified Operation. The instructions located on the inside of the fold provide a quick introduction to the operation of the CW Generator. In addition, an index to the Detailed Operating Instructions is provided to direct the user to the more complete discussion of the topic of interest.

Detailed Operating Instructions. The Detailed Operating Instructions provide the complete operating reference for the CW Generator user. The instructions are organized alphabetically by subject. They are indexed by function in Table 3-2.

3-5. Remote (HP-IB) Operation

The CW Generator is capable of remote operation via the Hewlett-Packard Interface Bus (HP-IB).

HP-IB is Hewlett-Packard's implementation of the IEEE Standard 488, "IEEE Standard Digital Interface for Programmable Instrumentation", also described by the identical ANSI Standard MC1.1. For a more detailed information relating to programmable control of the CW Generator, refer to Remote (HP-IB) Operation in this section.

This section includes discussions on capabilities, addressing, input and output formats, the status byte and service request. In Table 3-4 is a complete summary of programming codes. In addition, programming examples are given in HP-IB Checks and in the Detailed Operating Instruction.

3-6. Operator's Checks

Operator's Checks are procedures designed to verify proper operation of the CW Generator's main functions. Two procedures are provided as described below.

Basic Functional Checks. This procedure requires only a 50 ohm load or attentuator to perform. For greater assurance, a microwave counter and a power meter can be used. This procedure assures that most front panel controlled functions are being properly executed by the CW Generator.

HP-IB Checks. This procedure assumes that front panel operation has been verified with the Basic Functional Checks. The procedure checks all of the applicable bus messages summarized in Table 3-3.

•

.....

Table 3-1. Operating Characteristics

Frequency	Range: 2.0 to 18.0 GHz				
	(Overrange to 18.599997 GHz)				
	Resolution: 1 kHz 2.0 to 6.2 GHz				
	2 kHz 6.2 to 12.4 GHz				
	3 kHz 12.4 to 18.0 GHz				
Output Level	Range: $-1/20$ to $+8$ dB in 10 dB steps				
or commonweal	Vernier: -10 to +3 dBm continuously variable				
ALC	Internal, external crystal detector, or external power meter leveling.				

Table 3-2. Index of Detailed Operating Instructions

3-14	ALC CONTROL	
0-14	Local Procedure	3-4
	Internal Leveling	3-4
	External Crystal Detector Leveling	3-4
	External Power Meter Leveling	3-4
	Remote Procedure	3-5
	Comments	3-7
3-15	FREQUENCY CONTROL	3-8
	Local Procedure	3-8
	Remote Procedure	3-8
	Comments	3-10
3-16	LEVEL CONTROL	3-12
	Local Procedure	3-12
	Remote Procedure	3-12
	Comments	3-13
3-17	PEAK-NORM ADJUSTMENT	3-15
	Local Procedure	3-15
	Comments	3-15
3-18	RF ON-OFF SWITCH	3-16
	Local Procedure	3-16
	Remote Procedure	3-16
	Comments	3-16

3-7. Operator's Maintenance

WARNING

For continued protection against fire hazard, replace the line fuse with a 250V fuse of the same rating only. Do not use repaired fuses or short-circuited fuseholders.

Operator's maintenance consists of replacing defective primary fuses. This fuse is located in the line module assembly. Refer to Figure 2-1 for instructions on changing the fuse.

·			

3-8. TURN-ON INSTRUCTIONS

WARNINGS

Before the instrument is switched on, all protective earth terminals, extension cords, autotransformers and devices connected to it should be connected to a protective earth grounded socket. Any interruption of the protective earth grounding will cause a potential shock hazard that could result in personal injury.

Only 250V normal blow fuses with the required rated current should be used. Do not use repaired fuses or short circuit fuseholders. To do so could cause a shock or fire hazard.

{CAUTIONS

Before the instrument is switched on, it must be set to the voltage of the power source or damage to the instrument may result.

1 The CW Generator's RF OUTPUT is protected against reverse power applications up to 1W, However, for greatest protection of expensive internal components, be careful not to apply any reverse power to the RF OUTPUT.

-9. Turn-On

Turn-On Procedure. The CW Generator has a STANDBY state and an ON state. Whenever the power cable is plugged in, an oven is energized to keep the reference oscillator at a stable operating temperature. If the CW Generator is already plugged in, set the LINE switch to ON.

If the power cable is not plugged in, follow these instructions.

On the rear panel:

- 1. Check the line voltage switch for correct voltage selection.
- 2. Check that the fuse rating is appropriate for the line voltage used (see Figure 2-1).
- 3. Plug in the power cable.

On the front panel, set the LINE switch to ON.

NOTE

The OVEN status annunciator should light to indicate that the CW Generator requires warming up. The annunciator should turn off within fifteen minutes and the CW Generator should be ready for general use.

Turn-On Configuration. The CW Generator turns on at the same frequency as before it was switched to STANDBY or even completely off (that is, if line power was removed).

3-10. Frequency Standard Selection

A FREQ STANDARD INT/EXT switch and two connectors are located on the rear panel. A jumper normally connects the FREQ STANDARD INT connector (A3J9) to the FREQ STANDARD EXT connector (A3J10). The

Frequency Standard Selection (cont'd)

FREQ STANDARD EXT connector can accept a reference signal to be used instead of the CW Generator's internal reference oscillator.

When the FREQ STANDARD INT/EXT switch is in the INT position and the jumper is connected between A3J9 and A3J10, the internal reference oscillator is enabled.

When the FREQ STANDARD INT/EXT switch is in the EXT position and the jumper is disconnected from the FREQ STANDARD EXT connector, a frequency standard of 5 or 10 MHz at 0 dBm (nominal) can be connected.

NOTE

The INTERNAL REF OFF status annunciator on the front panel will light when an external reference is being used. Also, the NOT PHASE LOCKED status annunciator may light if the external reference is not of sufficient accuracy in frequency or has an insufficient power level. The external reference must be within ±200 Hz of 10 MHz or ±100 Hz of 5 MHz for reliable locking to occur. If the external reference level is not within the specified limits (0.1 to 1 Vrms into 50 ohms), its level may be sufficient to turn off the NOT PHASE LOCKED status annunciator. However, the phase noise of the CW Generator may be degraded.

			:
·			
			:
			:
			:
			:
			:
			- - - - - - - -
			:
i e			:
			:
			:



FRONT PANEL FEATURES


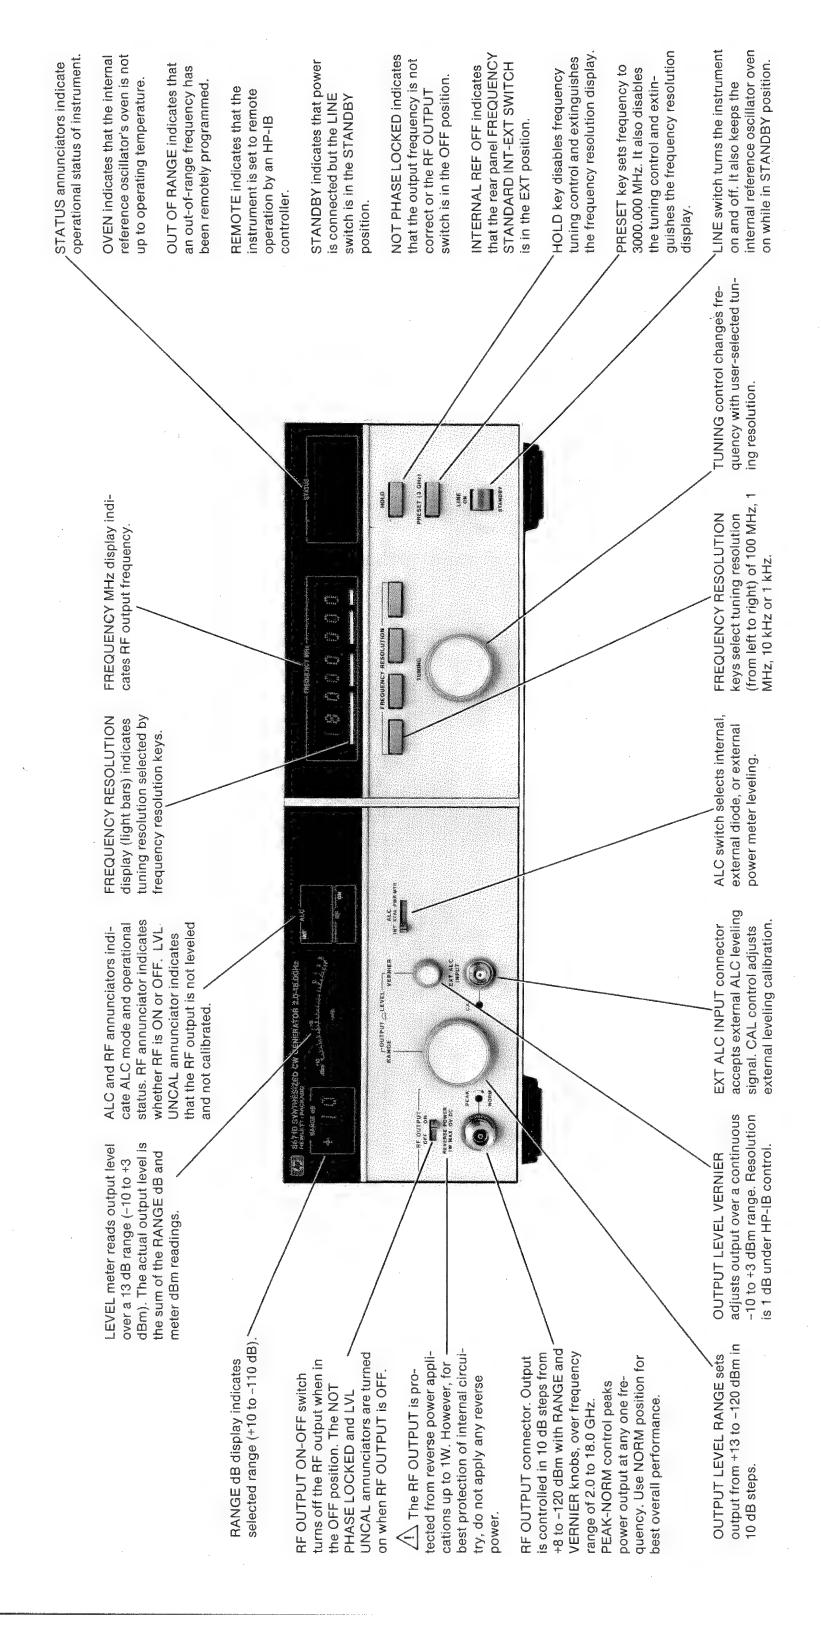


Figure 3-1. Front Panel Features

·		
•		
		:

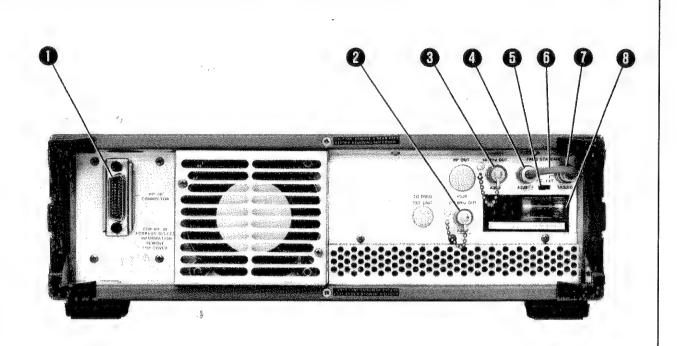

- HP-IB CONNECTOR: connects the CW Generator to the Hewlett-Packard Interface Bus for remote operation. When in remote operation, the REMOTE annunciator illuminates.
- 2 100 MHz OUT (A3J7): 0 dBm (nominal) into 50 ohms, can be used as an external timebase and for troubleshooting.
- 3 10 MHz OUT (A3J8): 0 dBm (nominal) into 50 ohms, can be used as an external timebase and for troubleshooting.
- 4 FREQ STANDARD Output (A3J9): 10.000 MHz into 50 ohms at +7 dBm (nominal) from the internal reference oscillator except when INT/EXT switch 3 is in the EXT position.
- 5 FREQ STANDARD INT/EXT switch: normally set to the INT position. Removes power from internal reference oscillator when in the EXT position.

- 6 Jumper (A3W3): normally connects the Internal Frequency Standard Output (A3J9) to the External Frequency Standard Input (A3J10).
- 7 FREQ STANDARD Input (A3J10): normally connected by A3W3 to A3J9. Also used to connect an external frequency standard of 5 or 10 MHz at 0 dBm to the CW Generator.
- 8 Line Power Module: permits operation from 100, 120, 220, or 240 Vac. The number visible in the window displays the nominal line (Mains) voltage for which the CW Generator is set (see Figure 2-1). The protective grounding conductor connects to the CW Generator through this module. The line power fuse (A3F1) is inside this module and is the only part to be changed by the operator.

HP 8671B Operation

3-11. SIMPLIFIED OPERATION

3-12. Frequency

Frequency is set using the FREQUENCY RESO-LUTION keys and the TUNING knob. For example, to set the frequency to 15345.678 MHz:

Press PRESET (3 GHz). This is not always necessary, but it will set the right-hand six digits to 0, and may provide a convenient starting point.

Select the 100 MHz FREQUENCY RESOLUTION key and adjust the TUNING knob for a frequency of 15300.000 MHz.

Select the 1 MHz FREQUENCY RESOLUTION key and adjust the TUNING knob for a frequency of 15345.000 MHz. Select the 10 kHz FREQUENCY RESOLUTION key and adjust the TUNING knob for a frequency of 15345.670 MHz.

Select the 1 kHz FREQUENCY RESOLUTION key and adjust the TUNING knob for a frequency of 15345.678 MHz.

Press HOLD to disable the TUNING knob.

3-13. Output Level

The output level is set with the OUTPUT LEVEL RANGE and VERNIER controls.

First, adjust RANGE to step the output level up or down by increments of 10 dB. The selected range is shown in the RANGE dB display.

Adjust VERNIER between -10 and +3 dBm, as read on the meter, for the desired output level.

The output level is determined by adding the RANGE dB display to the LEVEL dBm meter reading.

3-14. ALC

ALC (automatic level control) has three modes of operation. They are:

INT (Internal leveling)

XTAL (External leveling using a crystal diode detector)

PWR MTR (External leveling using a power meter)

Internal leveling is selected for most applications. In this mode, an internal detector senses the level at the input of the 10 dB step attenuator, and the internal leveling circuitry keeps the output level constant. Loss of leveling is indicated by the LVL UNCAL annunciator.

For external leveling a crystal diode detector or power meter can be used. Operation is described further in the Detailed Operating Instructions.

3-15. ALC CONTROL

Description

The Synthesized CW Generator has three modes of Automatic Level Control (ALC);

INT (Internal leveling)

XTAL (External leveling using a crystal diode detector)

PWR MTR (External leveling using a power meter)

For most applications internal ALC (INT) will be used. With internal ALC the output power remains flat over the entire 2 to 18 GHz frequency range.

External ALC is used when the power level at a remote point must be kept constant. External ALC reduces power variations due to external cables and connectors.

The ALC switch selects the leveling mode. Positive or negative detectors can be used to supply the external ALC input voltage. A calibration adjustment allows the externally leveled power to be adjusted to match the VERNIER setting over a limited output power range. The calibration adjustment does not affect internal leveling.

ALC mode and status are indicated by the ALC display. The display indicates which leveling source is selected and when the output is unleveled. The status of the ALC, whether leveled or unleveled, can also be determined remotely by reading the status byte.

Local Procedure

To use Internal Leveling:

Set the ALC selector to INT. The output level will be the sum of the range and VERNIER settings.

To use XTAL (External Crystal) Leveling:

- 1. Connect the crystal detector and the 10 dB coupler as shown in Figure 3-3.
- 2. Set the ALC selector to INT and adjust the VERNIER to read 0 dBm on the meter. This allows calibration of the meter to the leveled point.
- 3. Set the output level range to 0 dB and the ALC selector to XTAL.
- 4. Adjust the ALC CAL control to set the level read on the power meter to the nearest 10 dBm. If the ALC control does not have enough range for a low power level adjustment, step the RANGE down until the adjustment can be made.

This level should be within -3 dB and +10 dB of the desired level. This calibrates the meter to agree with the leveled power. If the detector is operating in the square law

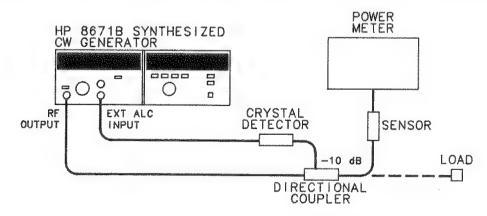


Figure 3-3. External Leveling with a Crystal Detector

ALC CONTROL (cont'd)

Local Procedure (cont'd) region, the VERNIER will now control the level over a continuous 13 dB range, and the CW Generator's meter reading will track with the power meter reading as the VERNIER control is varied through the -10 to +3 dBm range.

To use external power meter leveling:

- 1. Set the ALC selector to INT and adjust the VERNIER to read 0 dBm on the meter. This allows calibration of the CW Generator's meter to the leveled point.
- 2. Connect power meter to the point where leveling is to be used as shown in Figure 3-4. A directional coupler can be used to sample the power at the desired point. Set the output level to the desired power and select the range hold function on the power meter. This disables range changes and keeps the leveled power from oscillating.
- 3. Connect the recorder output of the power meter to the external ALC input connector. The recorder output is a voltage that is proportional to the measured power in watts. This voltage varies from 0 to 2 volts for each power meter range. Leveling as low as -60 dBm can be accomplished with a sensitive power sensor using this method.
- 4. Set the output level range to 0 dB and the ALC selector to PWR MTR.
- 5. Adjust the ALC CAL controls to set the level read on the power meter to the nearest 10 dBm. This level should be within -3 dB and +10 dB of the desired level (minus the coupling factor of the directional coupler). This calibrates the CW Generator's meter to agree with the leveled power. This power leveling method has a slow settling time but has the advantage of high sensitivity and temperature compensation.

If the ALC CAL control does not have enough range for a low power level adjustment, step the RANGE down until the adjustment can be made.

Remote Procedure

The ALC program code controls the function of the RF output ON/OFF switch, the ALC selector and the $\pm 10\,\mathrm{dB}$ range of output power. The program string consists of the letter O followed by a single argument representing the desired combination of the control positions.

To set the CW Generator to the $+10\,dB$ range, you must first set it to $0\,dB$ with the range command (code and argument) K0. Then you can set the $+10\,dB$ range with the appropriate ALC command.

The codes are summarized in the table under Program Codes.

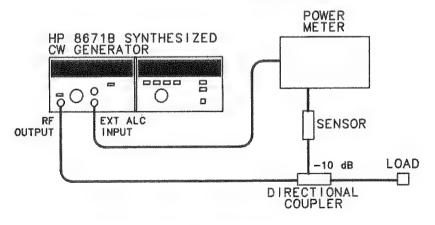


Figure 3-4. External Leveling with a Power Meter

ALC CONTROL (cont'd)

Example


To set internal ALC with an output level of +3 dBm:

Local

Set ALC selector to INT, RF output to ON, range to 0 dB and VERNIER for +3 dBm.

Or

Set ALC selector to INT, RF output to ON, range to +10 dB and VERNIER to -7 dBm.

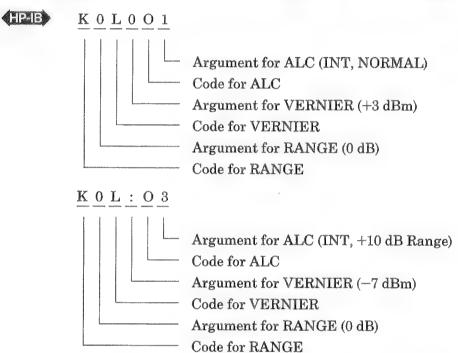

Program Codes HP-IB

Dragram Cada		Aumoussant			
Program Code	RF	RANGE	ALC	Argument	
	. ~ ~ ~ ~ ~ ~ ~ ~ ~ ~ ~ ~ ~ ~ ~ ~ ~ ~ ~	NORM	INT XTAL PWR MTR	0 4 <	
0 or _	OFF	+10	INT XTAL PWR MTR	2 6 >	
(letter O, not zero)	ON	NORM	INT XTAL PWR MTR	1 5 =	
	ON	+10	INT XTAL PWR MTR	3 7 ?	

ALC CONTROL (cont'd)

Comments

Output level flatness is dependent on the ALC circuitry and the maximum available power. In order to have a leveled output it is necessary for the ALC circuitry to continuously control the output level. This can only occur if the selected output power is below the maximum power level available at each frequency. For leveled output power in the ± 10 dB range, it is necessary that the LVL UNCAL annunciator remain off.

External ALC leveling also requires that the CW Generator can produce enough power to overcome losses in the intervening circuitry. The LVL UNCAL annunciator must remain off to achieve leveling. The 0 dB range should be used when using external leveling. If any of the lower ranges are used, the CW Generator must produce a higher level to overcome the attenuation introduced by the range selected.

For output level settings above +8 dBm, spurious oscillations can occur, resulting in sidebands on the carrier at a level of 30 to 50 dBc. These oscillations occur only over small portions of the frequency range. They can usually be eliminated by performing a PEAK-NORM adjustment or by reducing the output level VERNIER setting 1 or 2 dB.

Typical output level switching times are detailed under Level Control. Enabling the RF output requires less than 30 milliseconds. Disabling the RF output can be accomplished in less than 5 milliseconds.

The state of the RF output (on or off) and the status of the $+10\,\mathrm{dB}$ range (selected or not selected) can be obtained by reading the status byte. The status of the ALC circuitry (leveled or not leveled) can also be monitored by reading the status byte. Once the status byte indicates that the output is leveled, an application can continue without waiting the specified time for the output level to settle.

Related Sections

Level Control PEAK-NORM Adjustment

3.16 FREQUENCY CONTROL

Description

The CW Generator uses a simple, convenient frequency tuning system.

All frequencies can be remotely programmed or entered manually by a tuning knob. The knob can be turned in either direction without encountering a mechanical stop. Also, the faster it is turned the greater the frequency change per revolution.

In addition, four degrees of coarse to fine tuning can be selected. Frequency resolution keys located above the tuning knob select 100 MHz, 1 MHz, 10 kHz or 1 kHz tuning increments. Due to frequency multiplication to generate frequencies above 6.2 GHz, the minimum tuning increment (resolution) is 2 kHz above 6.2 GHz and 3 kHz above 12.4 GHz.

Once a desired frequency has been set, pressing the HOLD key will disable the tuning control and prevent unintentional changes in the frequency. The preset key sets the output frequency to 3000.000 MHz for conveniently setting the least significant digits to zeroes.

When the CW Generator is turned off or the power cable is removed, the last frequency setting is stored in battery-powered memory. When the instrument is powered up, the frequency returns to the stored value. This feature maintains the frequency setting even after power failures or extended periods without power.

Local Procedure

To set the output frequency to any desired frequency:

- 1. Press PRESET (3 GHz). This is not always necessary, but it will set the right-hand six digits to 0, and may provide a convenient starting point.
- 2. Select the desired tuning increment (100 MHz, 1 MHz, 10 kHz, or 1 kHz) by pressing the appropriate FREQUENCY RESOLUTION key, and use the TUNING knob to set the frequency digits above the rightmost lighted segment in the frequency resolution display.
- 3. Once the desired frequency is set, press the HOLD key to disable the TUNING knob.

Remote Procedure

The CW Generator accepts any frequency within its range (2000.000 to 18599.997 MHz) to 8 significant digits. Above 6.2 GHz the frequency is randomly rounded up or down to be compatible with the 2 kHz or 3 kHz resolution at the programmed frequency.

The CW Generator ignores spaces, commas, decimal points, carriage returns and line feeds.

Within the CW Generator, frequency information is stored in two separate blocks of four digits each. The effects of programming codes on the two internal frequency data blocks are shown in Figure 3-5. One block contains the 10 GHz through 10 MHz frequency digits and the other contains the 1 MHz through 1 kHz digits. Programming within one block does not change the other blocks unless it is necessary to round off a frequency above 6.2 GHz. The programming codes indicate the most significant digit being programmed.

The output frequency does not change until the frequency execute command (Z1) is received by the CW Generator. This command must be sent sometime after the frequency data has been sent.


FREQUENCY CONTROL (cont'd)

Example

To change frequency from 3000.231 MHz to 3450.001 MHz:

Local

- 1. Press the 100 MHz (leftmost) FREQUENCY RESOLUTION key. Adjust TUNING for a frequency of 3400.000 MHz.
- 2. Press the 1 MHz (next) FREQUENCY RESOLUTION key. Adjust TUNING for a frequency of 3450.000 MHz.
- 3. Press the 1 kHz (rightmost) FREQUENCY RESOLUTION key. Adjust TUNING for a frequency of 3450.001 MHz.

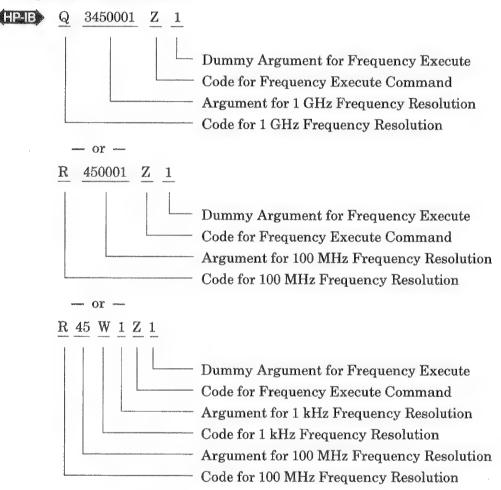

Program Codes

	PROGRAM (ARGUMENTS	
FREQUENCY	10 GHz 1 GHz 100 MHz 10 MHz 1 MHz 100 kHz 10 kHz 1 kHz EXECUTE	@ or P A or Q B or R C or S D or T E or U F or V G or W J or Z	0 THROUGH 9

FREQUENCY CONTROL (cont'd)

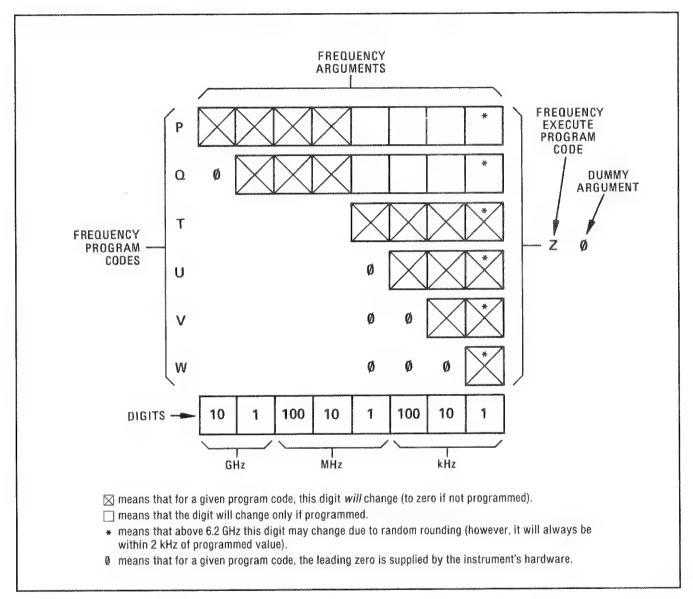


Figure 3-5. Frequency Programming Codes and Arguments

Comments

Due to the use of frequency multiplication to generate frequencies above 6.2 GHz, the frequency sometimes cannot be set precisely to a desired value. Frequencies between 2 and 6.2 GHz can be set to the nearest 1 kHz. All frequencies between 6.2 and 12.4 GHz can be set within 1 kHz of the desired value. All frequencies between 12.4 and 18 GHz can be set within 2 kHz of the desired frequency.

When the CW Generator is programmed to a frequency that is not evenly divisible, a random roundoff occurs. To prevent this, remote programming one should perform a calculation to determine whether the frequency can be set exactly.

To determine whether a frequency can be set to a given value, divide the desired frequency (in kHz) by two if it is between 6.2 and 12.4 GHz, or by three if it is above 12.4 GHz. IF the result is a whole number (with no remainder) the frequency can be set to the

FREQUENCY CONTROL (cont'd)

Comments (cont'd)

The time it takes to switch from one frequency to the next depends on the largest frequency digit being changed. Generally, the smaller the digit being changed, the shorter the switching time. Typical switching times by largest digit being changed for frequencies between 2 and 6.2 GHz can be summarized as follows:

Largest Digit	Time to be
Changed	Within 1 kHz
100 MHz	10 ms
10 MHz	10 ms
1 MHz	10 ms
100 kHz	5 ms
10 kHz	3 ms
1 kHz	1.5 ms

For frequencies above 6.2 GHz, actual frequency digits being changed must be determined by dividing the output frequency by two (6.2 to 12.4 GHz) or three (12.4 to 18 GHz). The actual data transfer time is only a small portion of the frequency switching time and can be ignored.

For applications that require fast execution, the status byte can be checked until the frequency is phase locked. Once the status byte indicates that the CW Generator is phase locked, the application may continue with the assurance that the frequency is correct. Figure 3-6 shows the typical worst case lock and settling times.

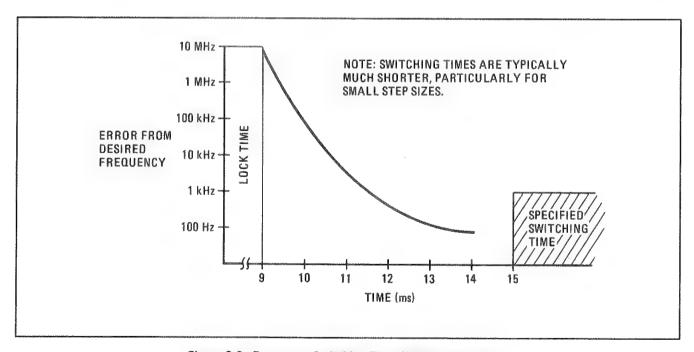


Figure 3-6. Frequency Switching Time Showing Worst Case

3-17. LEVEL CONTROL

Description

The Synthesized CW Generator is calibrated over a wide range of output power levels from +8 dBm to -120 dBm. The output level is set with a RANGE selector and a VERNIER control. The output level is the sum of the settings of these two controls.

The RANGE selector varies the output level in 10 dB steps. The selected range (+10 dB to -110 dB) is digitally displayed in the RANGE display. This display indicates the selected range in both local and remote modes. Output level ranges of 0 dB to -110 dB are programmable with the range program code. The +10 dB range is selected using the ALC program code.

The VERNIER knob continuously varies the output level in the 0 dB range from -10 to +3 dBm. The VERNIER setting is indicated by the front panel meter.

In local mode the VERNIER can be varied continuously over the full 13 dB range. In remote mode the VERNIER can be programmed in fourteen 1 dB steps from -10 dBm to +3 dB. Because the VERNIER can be controlled over greater than 10 dB in both local and remote mode, it is possible to overlap range settings by 3 dB. This is useful in applications where the ability to vary the output power continuously about a given level is critical.

Local Procedure

To set the output level to any desired value:

- 1. Set the CW Generator ALC mode to internal (INT).
- 2. Set the OUTPUTLEVEL RANGE to within -3 to +10 dB of the desired output level. For example, for a -56 dBm output level choose the -50 dB range.
- 3. Adjust the OUTPUT LEVEL VERNIER setting until the sum of the range display and the meter is equal to the desired output level.

Some output levels may be set using either of two adjacent ranges. Either range may be used. For example, +3 dBm may be set with a 0 dB range and +3 dBm VERNIER setting or a +10 dB range and -7 dBm VERNIER setting.

Setting output levels above +8 dBm may cause an ALC unleveled condition due to insufficient power available. The meter will indicate the actual power available when the unleveled condition occurs.

Remote Procedure

The 0 dB to -110 dB ranges and the VERNIER setting are programmed with the output level program codes. The VERNIER setting is programmed in 1 dB steps from -10 dBm to +3 dBm. The range is programmed in 10 dB steps from 0 dB to -110 dB. The +10 dB range is programmed by setting RANGE to 0 dBm and ALC to +10 dB.

When switching from local to remote mode, the VERNIER is reset to -10 dB and the range remains unchanged.

Example

To set the output level to +3 dBm:

Loca

Set RANGE to 0 dB and VERNIER to +3 dBm.


Or


Set RANGE +10 dB and VERNIER to -7 dBm.

LEVEL CONTROL (cont'd)

Example (cont'd)



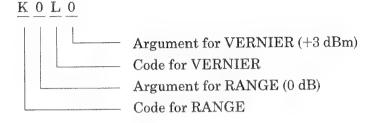

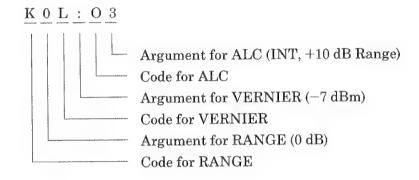

Program Codes

	Program Codes	Argumen	ts
OUTPUT LEVEL RANGE	K	0 dBm -10 -20 -30 -40 -50 -60 -70 -80 -90 -110	0 1 2 3 4 5 6 7 8 9 :

	Program Codes	Argumen	its
-		+3 dB	0
		+2	1
		+1	2
置		0	3
~		-1	4
3	Y	-2	5
VEL	L	-3	6
		-4	7
Ž		5	8
OUTPUT LEVEL VERNIER		-1 -2 -3 -4 -5 -6	9
0		-7	:
		-7 -8 -9	;
		-9	<
		-10	MARKE

Comments

Output level flatness is dependent on the ALC circuitry and the maximum available power. In order to have a leveled output it is necessary for the ALC circuitry to continuously control the output level. This can only occur if the selected output power is below the maximum power level available at each frequency. For leveled output power in the $+10\,\mathrm{dB}$ range, it is necessary that the LVL UNCAL annunciator remain off. If it lights, adjust the PEAK-NORM control, or reduce the VERNIER setting.

For output level settings above +8 dBm, spurious oscillations can occur, resulting in sidebands on the carrier at a level of 30 to 50 dBc. These oscillations occur only over small portions of the frequency range.

LEVEL CONTROL (cont'd)

Comments (cont'd)

They can usually be eliminated by performing a PEAK-NORM adjustment or by reducing the OUTPUT LEVEL VERNIER setting 1 or 2 dB.

External ALC leveling also requires that the CW Generator can produce enough power to overcome losses in the intervening circuitry. The LVL UNCAL annunciator must remain off to achieve leveling. If it lights adjust the PEAK-NORM control, or decrease the the VERNIER setting.

Typical output level range change execution time for a 10 dB step is less than 20 milliseconds. An output level VERNIER change of 1 dB will take less than 10 milliseconds. These times are typical for remote programming. The actual data transfer time is a very small part of the execution time and may be ignored for most controllers.

The RF output changing from enabled to disabled takes less than 5 milliseconds. To enable the RF output from a disabled state requires less than 30 milliseconds.

The state of the RF output (on or off) and the $+10\,\mathrm{dB}$ range (selected or not selected) can be obtained by reading the status byte. These two functions are programmed along with the ALC mode. For more information see ALC Control.

Related Sections

ALC Control

PEAK-NORM Adjustment

3-18. PEAK-NORM ADJUSTMENT

Description

The PEAK-NORM control adjusts an internal filter for maximum power output at a single frequency. This filter is adjusted for best over-all performance with the control in the detent position (NORM), but can be adjusted for maximum power (and reduced harmonics and sub-harmonics) at any one frequency. This adjustment will result in lower maximum power at most other frequencies, and therefore should be left in the NORM position except when maximum power is needed. It should only be required at power levels above $+8~\mathrm{dBm}$.

Local Procedure

To maximize the output power at a set frequency:

Adjust the PEAK-NORM adjustment until the LVL UNCAL annunciator turns off, or for maximum meter reading with the VERNIER fully clockwise.

Remote Procedure

This adjustment cannot be remotely programmed.

Example

To peak an output level of +10 dBm at 8 GHz due to a LVL UNCAL indication:

- 1. Adjust the PEAK-NORM adjustment until the LVL UNCAL annunciator turns off, or for maximum meter reading with the VERNIER fully clockwise.
- 2. Return the PEAK-NORM adjustment to NORM (detented) position before resuming normal instrument operation. The +8 dBm output power level is affected by this adjustment and is only specified with the PEAK-NORM adjustment set to NORM.

Comments

For output level settings above +8 dBm, spurious oscillations can occur, resulting in sidebands on the carrier at a level of 30 to 50 dBc. These oscillations occur only over small portions of the frequency range.

They can usually be eliminated by performing a PEAK-NORM adjustment or by reducing the output level VERNIER setting 1 or 2 dB.

The PEAK-NORM adjustment must be in the NORM (detented) position to guarantee the specified +8 dBm level over the entire frequency range.

3-19. RF ON/OFF SWITCH

Description

The RF ON/OFF switch provides a convenient way of turning off the output signal. This is useful when calibrating detectors, zeroing power meters, or making noise measurements with no signal applied. With the switch in the off position the internal 2 to 6.2 GHz oscillator is turned off to prevent any signal leakage to the RF output connector.

The RF annunciator indicates the position of the RF ON/OFF switch in local mode and the programmed state when in remote mode. With the internal 2 to 6.2 GHz oscillator turned off, the CW Generator is no longer phase locked or leveled so the LVL UNCAL and NOT PHASE LOCKED annunciators are lighted.

Local Procedure

To disable the RF output:

Set the RF ON/OFF switch to OFF. Note that the OFF, LVL UNCAL and NOT PHASE LOCKED annunciators should be lighted.

To enable the RF output:

Set the RF ON/OFF switch to ON. The LVL UNCAL and NOT PHASE LOCKED annunciators should extinguish and the ON annunciator should light.

Remote Procedure

See ALC Control for a description of how to program the RF ON/OFF switch function.

Program Codes

See ALC Control

Comments

The status of the RF output (on or off) can be determined by reading the status byte. A service request is not generated for LVL UNCAL or NOT PHASE LOCKED when the RF output is set to OFF.

The RF output off-to-on transition typically requires less than 30 milliseconds when remotely programmed. The on-to-off transition typically requires less than 5 milliseconds.

3-20. REMOTE (HP-IB) OPERATION

The CW Generator can be operated through the Hewlett-Packard Interface Bus (HP-IB). HP-IB compatibility, programming and data formats are described in the following paragraphs.

All front panel functions except that of the ALC CAL control, PEAK-NORM control, and LINE switch are programmable via HP-IB.

A quick test of the CW Generator's HP-IB interface is described in this section under HP-IB Checks. These checks verify that the CW Generator can respond to or send each of the applicable bus messages described in Table 3-3.

3-21. HP-IB Compatibility

The CW Generator's programming capability is described by the twelve HP-IB messages listed in Table 3-3. The CW Generator's compatibility with HP-IB is further defined by the following list of interface functions: SH1, AH1, T6, TE0, L4, LE0, SR1, RL2, PP2, DC1, DT0, and C0. A more detailed explanation of these compatibility codes can be found in IEEE Standard 488-1978 and the identical ANSI Standard MC1.1.

3-22. Remote Mode

Remote Capability. The CW Generator communicates on the bus in both remote and local modes. In remote, the CW Generator's front panel controls are disabled except for the LINE switch. However, front panel displays remain active and valid. In remote, the CW Generator can be addressed to talk or listen. When addressed to listen, the CW Generator automatically stops talking and responds to the following messages: Data, Clear (SDC), Remote, Local, and Abort. When addressed to talk, the CW Generator automatically stops listening and sends one of the following messages: Data, Require Service, or Status Byte. Whether addressed or not, the CW Generator responds to the Clear (DCL), Clear Lockout/Set Local, and Abort messages. In addition, the CW Generator can issue the Require Service message and the Status Bit message.

Local-to-Remote Mode Changes. The CW Generator switches to remote operation upon receipt of the Remote message. The Remote message has two parts. They are:

a. Remote enable bus control line (REN) set true.

b. Device listen address received once (while REN is true).

When the CW Generator switches to remote, the REMOTE annunciator on the front panel turns on. With the exception of VERNIER, which will reset to -10 dBm, the CW Generator's control settings remain unchanged with the Local-to-Remote transition.

3-23. Local Mode

Local Capability. In local, the CW Generator's front panel controls are fully operational and the instrument will respond to a Remote message. The CW Generator can send a Require Service message, a Status Byte message, and a Status Bit message while in the Local mode.

Remote-to-Local Mode Changes. The CW Generator switches to local from remote whenever it receives a Local (GTL), Universal Unlisten address, Abort, or Clear Lockout/Set Local message. (The Clear Lockout/Set Local message sets the Remote Enable control line [REN] false.) The CW Generator can also be switched to local by turning the LINE switch to STANDBY, and then to ON.

With the Remote-to-Local transition, the frequency will remain the same. All other functions will return to the front panel settings. Power may go up, go down, or stay the same.

3-24. Addressing

When the Remote Enable line (REN) and the Attention control line (ATN) are true and the Interface Clear control line (IFC) is false, the CW Generator interprets the byte on the eight HP-IB data lines as an address or a command.

The CW Generator's Talk and Listen addresses can be set by switches located inside the instrument. The address selection procedure is described in Section II. Refer to Table 2-1 for a comprehensive listing of all valid HP-IB address codes.

3-25. Data Messages

The CW Generator communicates on the interface bus primarily with Data messages. Data messages consist of one or more bytes sent over the bus' data lines when the bus is in the data mode (attention control line [ATN] false). The CW Generator receives Data messages when addressed to listen, and sends the Status Byte message when addressed to talk. All instrument operations available in

Table 3-3. Message Reference Table (1 of 2)

HP-IB Message	Message cable Response		Related Commands and Controls	Interface Functions*
Data				AH1 SH1 T6, TE0 L4, LE0
Trigger	No	The CW Generator does not respond to the Group Execute Trigger (GET) bus command	GET	DT0
Clear	Yes	Sets frequency to 3000.000 MHz, RF output to off, ALC mode to Internal, and VERNIER to $-10~\mathrm{dBm}$.	DCL SDC	DC1
Remote	Yes	Remote mode is enabled when the REN bus control line is true. However, remote mode is not entered until the first time the CW Generator is addressed to listen. The front panel REMOTE annunciator lights when the instrument is actually in the remote mode. The VERNIER is set to $-10~\mathrm{dBm}$.	REN	RL1
Local	Yes	The CW Generator returns to local mode (front panel control). The CW Generator returns to the previous front panel settings, except for frequency.		RL2
Local Lockout	No	The CW Generator does not respond to the local lockout command.	LLO	RL2
Clear Lockout/ Set Local	Yes	The CW Generator returns to local (front panel control) when the REN bus control line goes false.	REN	RL2
Pass Control/ Take Control	No	The CW Generator has no controller capability.		Со
Require Service	Yes	The CW Generator sets the SRQ bus control line true if one of the following conditions exists: frequency out of range, not phase locked with RF output on, or RF power level uncalibrated with RF power on.	SRQ	SR1
Status Byte	Yes	The CW Generator responds to a Serial Poll Enable (SPE) bus command by sending an 8-bit status byte when addressed to talk. If the instrument is holding the SRQ control line true (issuing the Require Service message), the RQS bit and the bit representing the condition causing the Require Service message to be issued will both be true.	SPE SPD	T5
Status Bit	Yes	The CW Generator responds to a Parallel Poll Enable (PPE) bus command by sending a status bit on a switch selected HP-IB data line.	PPE	PP2

HP 8671B

Table 3-3. Message Reference Table (2 of 2)

HP-IB Message	Appli- cable	Response	Related Commands and Controls	Interface Functions*
Abort	Yes	The CW Generator stops talking and listening.	IFC	T6, TE0 L4, LE0

^{*}Commands, Control lines, and Interface Functions are defined in IEEE Std 488-1978. Knowledge of these may not be necessary if your controller's manual describes programming in terms of the twelve HP-IB Messages shown in the left column.

Complete HP-IB capability as defined in IEEE Std 488 and ANSI Std MC1.1 is: SH1, AH1, T6, TE0, L4, LE0, DT0, DC1, RL2, C0, SR1, and PP2.

Data Messages (cont'd)

local mode can be performed in remote mode via Data messages except changing the ALC CAL and PEAK-NORM controls and the LINE switch setting.

3-26. Receiving Data Messages

The CW Generator responds to Data messages when it is enabled to remote (REN control line true) and addressed to listen. The instrument remains addressed to listen until it receives an Abort message or until its talk address or a universal unlisten command is sent by the controller.

A data message is a string of alternate codes and arguments, where a code is an ASCII character representing a function, such as frequency, RF output level, or ALC mode, and an argument is an ASCII digit representing a selection of the function. Each code and its argument make a command.

A complete summary of programming formats, codes and arguments is given in Table 3-4. In addition, programming examples are given in HP-IB Checks, and in the Detailed Operating Instructions.

The Complete Data Message. The following program string is a complete data message. It lists the commands in the order that the CW Generator decodes them, along with arguments that will be explained.

"P1Q2R3S4T5U6V7W8Z1K9L7M0N7O1"

The commands preceding Z1 program a frequency of 12345.678 MHz. Z1 is a frequency execute command which is required to execute a string of frequency commands. K9 and L7 program output RANGE and VERNIER to -90 dB and -4 dBm respectively. M0 and N7 are used to program AM and FM in the HP 8672A (a similar synthesized signal generator with AM and FM capabilities) and are used as dummy commands to make program strings compatible with the HP 8672A. The O1 command programs ALC to internal leveling.

The Abbreviated Data Message. If functions are programmed in the order listed, codes can be omitted from the string, except for the first code, and Z1, the frequency execute command, if programming frequency. Thus, the following string is equivalent to the one above.

"P12345678Z197071"

Furthermore, the string can begin with any code and end with any argument, and can be composed of combinations of this syntax. Thus, the following string will program the CW Generator to a frequency of 2345 MHz, with a VERNIER setting of 0 dBm, without changing the output level RANGE setting.

"Q2345Z1L3"

3-27. Receiving the Clear Message

The CW Generator responds to the Clear message by setting the frequency to 3 GHz, ALC to internal, and RF power off. The message can take two forms: Device Clear which the CW Generator re-

Receiving the Remote Message (cont'd)

sponds to only when addressed, and Selected Device Clear, which it responds to whether addressed or not. The Device Clear message does not affect addressing, while the Selected Device Clear message leaves the CW Generator addressed to listen.

3-28. Receiving the Trigger Message

The CW Generator does not respond to the Trigger message.

3-29. Receiving the Remote Message

The Remote message has two parts. First, the remote enable bus control line (REN) is held true; second, the device listen address is sent by the controller. These two actions combine to place the CW Generator in remote mode. Thus, the CW Generator is enabled to go into remote when the controller begins the Remote message, but it does not actually switch to remote until addressed to listen the first time. When actually in remote, the CW Generator's front panel REMOTE annunciator lights.

3-30. Receiving the Local Message

The Local message is the means by which the controller sends the Go To Local (GTL) bus command. The CW Generator returns to front panel control when it receives the Local message.

When the CW Generator goes to local mode, the front panel REMOTE annunciator turns off. However, even in local, the CW Generator sends the status byte when addressed to talk.

3-31. Receiving the Local Lockout Message

The CW Generator does not respond to the Local Lockout message.

3-32. Receiving the Clear Lockout/ Set Local Message

The Clear Lockout/Set Local message is the means by which the controller sets the Remote Enable (REN) bus control line false. The CW Generator returns to local mode (full front panel control) when it receives the Clear Lockout/Set Local message. When the CW Generator goes to local mode, the front panel REMOTE annunciator turns off.

3-33. Receiving the Pass Control Message

The CW Generator does not respond to the Pass

Control message because it does not have this controller capability.

3-34. Sending the Require Service Message

The CW Generator sends a Require Service message if one or more of the following conditions exists for more than 50 ms:

- 1) Frequency programmed out of range
- 2) Not phase locked with RF output on
- 3) RF power level uncalibrated (LVL UNCAL) with RF power on.

The CW Generator can send a Require Service message in either the local or remote mode, and whether or not addressed. It sends the message by setting the Service Request (SRQ) bus line true.

Once the CW Generator is addressed to talk, the RQS bit is latched, even though CW Generator's need for service may have changed.

3-35. Sending the Status Byte Message

After receiving a Serial Poll Enable bus command (SPE) and when addressed to talk, the CW Generator sends a Status Byte message. The message consists of one 8-bit byte which corresponds to the pattern shown in Table 3-4, Programming Quick Reference Guide.

3-36. Sending the Status Bit Message

The CW Generator sends the Status Bit message in response to the Parallel Poll Enable (PPE) bus command (whether or not it is addressed to talk). If the CW Generator is sending the Require Service message, it will set its assigned status bit true.


The data line that the parallel poll is assigned to respond on, and the sense (active high or active low) can be set from switches located inside the instrument. The selection procedure is described in Section II.

3-37. Receiving the Abort Message

The Abort message is the means by which the controller sets the Interface Clear (IFC) bus control line true. When the Abort message is received, the CW Generator becomes unaddressed and stops talking or listening.

Table 3-4. Programming Quick Reference Guide

PROGRAM STRING SYNTAX

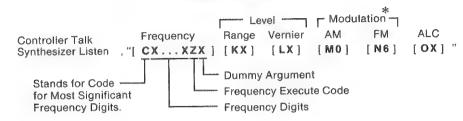

WHERE: C = PROGRAM CODE

X = ARGUMENT OR FREQUENCY DIGIT

	PROGRAM C	ODES	ARGUME	NTS
FREQUENCY	10 GHz 1 GHz 100 MHz 10 MHz 1 MHz 100 kHz 10 kHz 1 kHz EXECUTE	@ or PA or QB or RC or SD or TE or UF or WJ or Z	0 THROUGH 9	
OUTPUT LEVEL RANGE	K or [0 dB -10 -20 -30 -40 -50 -60 -70 -80 -90 -100 -110	0 1 2 3 4 5 6 7 8 9 ;

Г					
	PROGRAM	CODES ARGUME		NTS	
OUTPUT LEVEL VERNIER	L or \		+3 dBm +2 +1 0 -1 -2 -3 -4 -5 -6 -7 -8 -9 -10		0 1 2 3 4 5 6 7 8 9 :;<=
E	Mc	or]* OFF		0 or 1	
E	No	or ~* OFF		6	or 7
		A	RGUMENTS		
	PROGRAM CODES			R	F
ပ		ALC		OFF	01
ALG	0 or	INT NORMAL INT, +10 RANGE XTAL, NORMAL XTAL, +10 RANGE MTR, NORMAL MTR, +10 RANGE		0 2 4 6 < >	1 3 5 7 = ?

STATUS BYTE

Bit Number Decimal Value	8 128	7 64	6 32	5 16	8	3	2	1
Function	CRYSTAL OVEN COLD	REQUEST SERVICE	OUT OF RANGE (Frequency)	RF OFF	NOT PHASE LOCKED	LEV UNCAL	0 (NOT USED)	+10 dBm OVER RANGE

^{*}Dummy codes for 8672A program compatibility.

3-38. OPERATOR'S CHECKS

3-39. Basic Functional Checks

Description

The purpose of these checks is to give reasonable assurance that the instrument is operating properly.

Each check has been designed to be performed with a minimum of test equipment, and in as short a time as possible. Therefore, although these checks are extremely valuable in identifying malfunctions, they are not a substitute for the Performance Tests in Section IV, which verify that the instrument is performing within its published specifications.

Each check is independent of the others and can be performed separately.

If a malfunction is suspected and the CW Generator is being returned to Hewlett-Packard for service, perform the entire procedure. Document the checks that failed on a blue repair tag located at the rear of this manual and attach the tag to the instrument. This will help ensure that the malfunction has been accurately described to service technicians for the best possible service.

Equipment

Procedure

Turn-On Check

- 1. Set the LINE switch to STANDBY. Remove all external cables from the front and rear panels of the CW Generator, including the power cable connecting the instrument to mains power.
- 2. Set the rear panel FREQ STANDARD INT/EXT switch to INT and connect the JUMPER (A3W3) between A3J9 and A3J10.
- 3. After the power cable has been disconnected from the CW Generator for at least 1 minute, reconnect it to the CW Generator. Check the front panel of the instrument to verify that the STANDBY and OVEN status annunciators are on.
- 4. Leave the instrument's LINE switch set to STANDBY until the OVEN status annunciator turns off. This should occur in 15 minutes or less, depending upon how long the CW Generator was disconnected from mains power. (The OVEN annunciator may flicker off and on temporarily just as the oven stabilization temperature is reached. This is normal operation.) Once the OVEN status annunciator is off set the LINE switch to ON.
- 5. Set the RF OUTPUT switch to ON. Set the FREQ STANDARD INT/EXT switch to EXT. Verify that the INTERNAL REF OFF and NOT PHASE LOCKED status annunciators turn on. Set the switch back to INT. The status annunciators shold then turn off.

Frequency Check

The FREQUENCY MHz display and NOT PHASE LOCKED status annunciator are used to check that the internal phase-lock loops remain phase locked across their tuning range. The actual frequency at the RF OUTPUT connector is not

Procedure (cont'd) (cont'd)

checked. However, the frequency can be monitored with a microwave frequency counter or spectrum analyzer for greater assurance that the CW Generator is operating properly.

If a frequency counter is to be used to check frequency, disconnect the jumper from the rear panel connector A3J10 and connect the frequency counter as shown in Figure 3-7. Set the CW Generator rear panel INT-EXT switch to EXT.

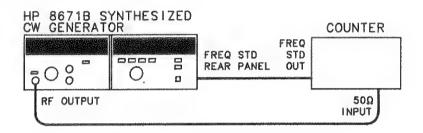


Figure 3-7. Frequency Checks Test Setup

6. Set the CW Generator as follows:

RF OUTPUT

PEAK-NORM control

OUTPUT LEVEL RANGE selector

OUTPUT LEVEL VERNIER

ALC selector

ALC CAL control

OFF

NORM (in detent)

fully counter-clockwise

fully counter-clockwise

7. Press the HOLD key. Verify that the CW Generator's displays indicate the following conditions:

RANGE dB display -110 dBMeter <-10 dBm

ALC annunciator INT and LVL UNCAL

RF annunciator OFF

FREQUENCY MHz display some frequency between 2.0 and

18.599997 GHz. If the display is not stable, press the PRESET

(3 GHz) key.

FREQUENCY RESOLUTION display All four segments extinguished.

STATUS annunciators:

OVEN may be on but should extinguish

within 15 minutes after line cord

is connected.

NOT PHASE LOCKED annunciator ON

All other annunciators should be extinguished.

Procedure (cont'd)

8. Press the PRESET (3 GHz) key and then the 100 MHz FREQUENCY RESOLUTION key. Verify that the leftmost segment in the FREQUENCY RESOLUTION display lights and that the other segments are extinguished.

NOTE

Do not tune above 6199.999 MHz in steps 9 through 17.

- 9. Verify that the displayed frequency can be tuned in 100 MHz increments using the TUNING knob.
- 10. Press the 1 MHz FREQUENCY RESOLUTION key. Verify that the two leftmost segments in the FREQUENCY RESOLUTION display are lighted and that the other segments are extinguished.
- 11. Verify that the displayed frequency can be tuned in 1 MHz increments using the TUNING knob.
- 12. Press the 10 kHz FREQUENCY RESOLUTION key. Verify that the three left-most segments in the FREQUENCY RESOLUTION display are lighted and that the other segment is extinguished.
- 13. Verify that the displayed frequency can be tuned in 10 kHz increments using the TUNING knob.
- 14. Press the 1 kHz FREQUENCY RESOLUTION key. Verify that all segments in the FREQUENCY RESOLUTION display are lighted.
- 15. Verify that the displayed frequency can be tuned in 1 kHz increments using the TUNING knob.
- 16. Tune the frequency to 4 GHz and press the HOLD key. Verify that the four segments of the FREQUENCY RESOLUTION display are extinguished.
- 17. Press the PRESET (3 GHz) key and verify that the FREQUENCY RESOLUTION display indicates 3000,000 MHz.
- 18. Set the CW Generator as follows:

RF OUTPUT ON

PEAK-NORM control NORM (in detent)

OUTPUT LEVEL RANGE selector 0 dB range

OUTPUT LEVEL VERNIER for 0 dBm reading on meter

ALC selector INT

ALC CAL control fully clockwise

- 19. Tune the CW Generator frequency to 2 GHz and select 1 kHz FREQUENCY RESOLUTION. Slowly tune from 2000.000 MHz to 2000.010 MHz. Verify that the NOT PHASE LOCKED annunciator remains off at each step.
- 20. Set the frequency tuning resolution to the values shown in the following table. For each tuning resolution, slowly tune from the corresponding start frequency to the stop frequency. Each time, verify that the NOT PHASE LOCKED annunciator remains off. (Each phase-locked loop is tuned over its entire range.)

Procedure (cont'd)

FREQUENCY RESOLUTION	Start Frequency	Stop Frequency
10 kHz	2000.010 MHz	2001.000 MHz
1 MHz	$2001.000~\mathrm{MHz}$	2100.000 MHz
100 MHz	$2100.000~\mathrm{MHz}$	6200.000 MHz

21. Set the frequency to 18599.997 MHz (overrange). Verify that the NOT PHASE LOCKED annunciator remains off.

Output Level Check

The CW Generator's internal output leveling loop (ALC) is checked to ensure that it remains locked at all specified power levels. The internal output leveling loop monitors most of the RF output circuitry. The output level can be monitored with a power meter for greater assurance that the CW Generator is operating properly.

22. Press PRESET (3 GHz). Set the CW Generator as follows:

RF OUTPUT ON

PEAK-NORM control NORM (in detent)

OUTPUT LEVEL RANGE selector fully counter-clockwise
OUTPUT LEVEL VERNIER fully counter-clockwise

ALC selector INT

ALC CAL control fully clockwise

- 23. Connect a 50 ohm load or attenuator to the CW Generator's RF OUTPUT connector. This reduces unwanted power reflections back into the RF OUTPUT connector, thus avoiding a false LVL UNCAL annunciator indication.
- 24. Tune the frequency to 6200.000 MHz.
- 25. Using the OUTPUT LEVEL RANGE selector, step the output level range from -110 to +10 dB. Verify that the LVL UNCAL annunciator remains off.
- 26. Set OUTPUT LEVEL RANGE to 0 dBm and sweep the OUTPUT LEVEL VERNIER across its entire range. Verify that the annunciator remains off at all VERNIER settings.
- 27. Select 100 MHz frequency tuning resolution and set the output level to +8 dBm. Tune slowly from 2000.000 MHz to 18000.000 MHz. Verify that the indicated power level on the CW Generator's meter remains constant and stable and that the LVL UNCAL annunciator remains off. This ensures that the instrument can generate specified output power and remain leveled.

NOTE

Momentary flashing of the LVL UNCAL when tuning is normal. Make sure that it remains off after the meter has settled, at each frequency.

3-40. HP-IB Checks

DESCRIPTION: These procedures check the CW Generator's ability to process or send the HP-IB messages described in Table 3-3. Only the CW Generator, a controller, and an HP-IB controller interface (for the HP-85B) are needed to perform these checks.

> These procedures do not check that all the CW Generator's program codes are being properly executed by the instrument. However, if the Basic Functional Checks and the HP-IB Checks all pass, then the instrument will probably execute all commands.

> If the CW Generator fails any of these HP-IB checks, make sure the controller and interface are working properly.

> The select code of the controller's HP-IB interface is assumed to be 7. The address of the CW Generator is assumed to be 19 (its factory-set address). This particular select code-address combination (that is, 719) is not necessary for these checks to be valid. However, the program lines presented here must be modified for any other combination.

Instructions for changing the address are in Section II, Installation.

These checks can be performed together or separately. Any special requirements for a check are described at the beginning of the check.

INITIAL SETUP:

The test setup is the same for all of the HP-IB Checks. Connect the the CW Generator to the controller and set the CW Generator as follows:

RF Output switch

PEAK-NORM control

NORM (in detent)

OUTPUT LEVEL RANGE selector

fully counter-clockwise

OUTPUT LEVEL VERNIER

fully clockwise

ALC selector

INT

CAL control

fully clockwise

Frequency

6000.000 MHz

EQUIPMENT:

- or -

HP 9826A Option 011

(BASIC 2.0 ROM Operating System)

- or -

HP 9836A with BASIC 2.0

Operating System

Remote and Local Message

NOTE:

This check determines whether the CW Generator properly switches from local to remote control and from remote to local control. If the instrument is in remote, switch the LINE switch to STANDBY, then to ON.

HP-IB Checks (cont'd)

Description	HP-85B (BASIC)	HP 9826A (BASIC) HP 9836A (BASIC)
Send the Remote message (by setting the Remote Enable bus control line, REN, true and addressing the CW Generator to listen).	REMOTE 719	REMOTE 719

OPERATOR'S RESPONSE:

Check that the CW Generator's REMOTE annunciator is on and the OUTPUT LEVEL meter reads -10 dBm.

LOCAL 719	LOCAL 719
	LOCAL 719

OPERATOR'S RESPONSE:

Check that the CW Generator's REMOTE annunciator is off and the OUTPUT LEVEL meter reads +3 dBm.

Receiving the Data Message

NOTE:

This check determines whether the CW Generator properly receives Data messages.

Description	HP-85B (BASIC)	HP 9826A (BASIC) HP 9836A (BASIC)
Send the first part of the Remote message (enabling the CW Generator to remote.)	REMOTE 7	REMOTE 7
Address the CW Generator to listen (completing the Remote message), then send a Data message.	OUTPUT 719; "P18W0Z173075"	OUTPUT 719; "P18W0Z173075"

OPERATOR'S RESPONSE:

Check that the CW Generator's REMOTE annunciator is on, RANGE dB indicates -70 dB, ALC annunciators show XTAL mode and LVL UNCAL, and the FRE-QUENCY MHz display shows 18000 MHz.

Sending the Data Message

NOTE:

This check determines whether the CW Generator properly issues a Data message when addressed to talk. Before beginning this test, set the LINE switch to OFF, then to ON. (If an HP 9826A or 9836A controller is used, a short program is required to perform this check.)

HP-IB Checks (cont'd)

Description	HP-85B (BASIC)	HP 9826A (BASIC) HP 9836A (BASIC)
Send the Remote message.	REMOTE 719	10 REMOTE 719
Send a Data message to set the status byte.	OUTPUT 719; "M070"	20 OUTPUT 719; "M070"
Address the CW Generator to talk and store its output in variable V.	ENTER 719 using "#,B";V	30 V=0 40 ENTER 719 using "#,B";V
Display the value of V.	DISP V	50 DISP V 60 END

OPERATOR'S RESPONSE:

Check that the CW Generator's REMOTE annunciator is on. The controller should display 28.

Receiving the Clear Message

NOTE:

This check determines whether the CW Generator responds properly to the Clear message. This Check assumes that the CW Generator is in remote mode.

Description	HP-85B (BASIC)	HP 9826A (BASIC) HP 9836A (BASIC)
Send a Data message to initialize the CW Generator	Output 719; "P18W0Z173075"	Output 719; "P18W0Z173075"

OPERATOR'S RESPONSE:

Check that the CW Generator is set to 18000 MHz, XTAL ALC mode, and RF OUTPUT ON.

		The special control of the second control of
Send the Clear message	CLEAR 719	CLEAR 719

OPERATOR'S RESPONSE:

Check that the CW Generator is set to 3000 MHz, INT ALC mode, and RF OUTPUT OFF.

Receiving the Abort Message

NOTE:

This check determines whether the CW Generator becomes unaddressed when it receives the Abort message. This check assumes the CW Generator is in remote mode and at a frequency other than 2000 MHz.

HP-IB Checks (cont'd)

Description	HP-85B (BASIC)	HP 9826A (BASIC) HP 9836A (BASIC)
Address the CW Generator to listen and send part of a frequency message.	OUTPUT 719; "A2000"	OUTPUT 719; ("A2000"
Send the Abort message, unaddressing the CW Generator from listening.	ABORTIO 7	ABORT 7
Address the controller to talk. The CW Generator is not addressed to listen.	SEND 7; MTA	SEND 7; MTA
Attempt to execute the previous frequency command by sending the frequency execute command.	OUTPUT 7; "Z1"	OUTPUT 7; "Z1"

OPERATOR'S RESPONSE:

Check that the CW Generator does not display 2000 MHz output frequency. If the controller is an HP 9826A or 9836A, press the CLR I/O key to continue the checks.

Status Byte Message

NOTE:

This check determines whether the CW Generator sends the Status Byte message. This check assumes that the Clear message has been sent.

Description	HP-85B (BASIC)	HP 9826A (BASIC) HP 9836A (BASIC)
Send the Serial Poll message to the CW Generator (causing it to send the Status Byte message). Display the value of the status byte.	SPOLL(719)	SPOLL(719)

OPERATOR'S RESPONSE:

Check that the controller's display reads 28.

Require Service Message

NOTE:

This check determines whether the CW Generator can issue the Require Service message (set the SRQ bus control line true). This check can be performed in either local or remote mode.

Description	HP-85B (BASIC)	HP 9826A (BASIC) HP 9836A (BASIC)
Send the Clear message	CLEAR 719	CLEAR 719
Send a Data message containing an out-of-range frequency. This causes the Require Service message to be sent.	OUTPUT 719; "P35Z1"	OUTPUT 719; "P35Z1"

HP-IB Checks (cont'd)

NOTE:

If an HP 9826A or 9836A controller is being used, a short program is required for the next part of this check.

Description	HP-85B (BASIC)	HP 9826A (BASIC) HP 9836A (BASIC)
Read the binary status of the controller's HP-IB interface and store the data in variable V. In this step, 7 is the interface's select code, and 2 (HP-85B) and 7 (HP 9826A) are status registers for bus control lines.	STATUS 7,2;V	10 V=0 20 STATUS 7,7; V
Display the value of the SRQ bit. In this step, 5 (HP-85B) and 10 (HP 9826A or HP 9836A) are the SRQ bits for the controller, numbered from 0.	DISP "SRQ="; BIT(V,5)	30 DISP "SRQ =";BIT(V,10) 40 END

OPERATOR'S RESPONSE:

Check that the SRQ value is 1, indicating that the CW Generator issued the Require Service message.

Status Bit Message

NOTE:

This check determines whether the CW Generator sends the Status Bit message. This check can be performed in either local or remote mode. This check assumes that the Clear message has been sent.

Description	HP-85B (BASIC)	HP 9826A (BASIC) HP 9836A (BASIC)
Set up a Service Request condition by programming an illegal frequency.	OUTPUT 719; "P99Z1"	OUTPUT 719; "P99Z1"
Send the parallel poll message to the CW Generator (causing it to send the Status Bit message).	PPOLL(7)	PPOLL(7)

OPERATOR'S RESPONSE:

Check that the controller displays 128, or the value of the bit that parallel poll switch is set to.

SECTION IV PERFORMANCE TESTS

4-1. INTRODUCTION

The procedures in this section test the instrument's electrical performance using the specifications of Table 1-1 as the performance standards. These tests are suitable for incoming inspection, trouble-shooting, and preventive maintenance. All tests can be performed without accessing the interior of the instrument. A simpler operational test is included in Section III under Operator's Checks.

4-2. ABBREVIATED PERFORMANCE TEST

In most cases, it is not necessary to perform all of the tests in this section. The following tests should be performed after repairing the CW Generator or to verify instrument operation:

FREQUENCY RANGE AND RESOLUTION, OUTPUT LEVEL, HIGH LEVEL ACCURACY AND FLATNESS

These tests can also be used for incoming inspections and preventative maintenance. They are not intended to be a complete check of specifications, but will provide 90% confidence that the CW Generator is meeting its major performance specifications. These tests can be performed with less time and equipment than the full Performance Tests.

NOTE

To consider the performance tests valid, the following conditions must be met:

- a. The CW Generator must have a 1-hour warmup for all specifications.
- b. The line voltage must be 100, 120, 220, or 240 Vac +5%, -10%.
- c. The ambient temperature must be +15 to $+35^{\circ}C$ for the Output Level Flatness and RF Output Level and Accuracy tests; 0 to $55^{\circ}C$ for all other tests.

4-3. CALIBRATION CYCLE

This instrument requires periodic verification of performance to ensure that it is operating within specified tolerances. The performance tests described in this section should be performed at least once each year; under conditions of heavy usage or severe operating environments, the tests should be more frequent. Adjustments that may be required are described in Section V, Adjustments.

4-4. PERFORMANCE TEST RECORD

Results of the performance tests may be tabulated in Table 4-3, Performance Test Record. The Performance Test Record lists all of the performance test specifications and the acceptable limits for each specification. If performance test results are recorded during an incoming inspection of the instrument, they can be used for comparison during periodic maintenance or troubleshooting. The test results may also prove useful in verifying proper adjustments after repairs are made.

4-5. EQUIPMENT REQUIRED

Equipment required for the performance tests is listed in Table 1-3, Recommended Test Equipment. Any equipment that satisfies the critical specifications given in the table may be substituted.

4-6. TEST PROCEDURES

It is assumed that the person performing the following tests understands how to operate the specified test equipment. Equipment settings, other than those for the CW Generator, are stated in general terms. For example, a test might require that a spectrum analyzer's resolution bandwidth be set to 100 Hz; however, the sweep time would not be specified and the operator would be expected to set that control and other controls as required to obtain an optimum display. It is also assumed that the technician will select the cables, adapters, and probes (listed in Table 1-3) required to complete the test setups illustrated in this section.

Performance Tests HP 8671B

PERFORMANCE TESTS

4-7. FREQUENCY RANGE AND RESOLUTION TEST

Specification

Electrical Characteristics	Performance Limits	Conditions
FREQUENCY		
Range	2.0—18.0 GHz (Overrange in 18.599997 GHz)	
Resolution	1 kHz 2 kHz 3 kHz	2.0 to 6.2 GHz 6.2 to 12.4 GHz 12.4 to 18.0 GHz

Description

This test checks the resolution in each of three internal frequency bands using a frequency counter. The performance test is divided into a baseband check (2.0 to 6.2 GHz) and a check for bands 2 and 3 (6.2 to 12.4 GHz and 12.4 to 18.0 GHz respectively).

Equipment

Frequency Counter HP 5343A

Procedure

Baseband Test

 Connect the equipment as shown in Figure 4-1. Set the CW Generator rear panel INT/EXT switch to EXT. Remove FREQ STANDARD jumper and connect A3J10 to the 10 MHz frequency standard output of the frequency counter.

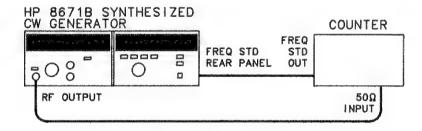


Figure 4-1. Frequency Range and Resolution Test Setup

- 2. Select 1 kHz display resolution on the counter.
- 3. Press the CW Generator's PRESET (3 GHz) key and set the output power to 0 dBm.
- 4. Verify that the frequency counter reads 3 000.000 MHz ± 1 count.

2 999.999 MHz _____ 3 000.001 MHz

- 5. Set the CW Generator frequency to 2 000.000 MHz.
- 6. Tune to each of the frequencies listed below. Verify that the CW Generator remains phase locked at all frequencies and that the frequency counter agrees with the CW Generator frequency display ± 1 count.

FREQUENCY RANGE AND RESOLUTION (cont'd)

Procedure (cont'd)

Frequency (MHz)	Minimum Frequency (MHz)	Actual Frequency (MHz)	Maximum Frequency (MHz)
2 000.000	1 999.999		2 000.001
2 000.001	2 000.000		2 000.002
2 001.112	2 001.111		$2\ 001.113$
2 002.223	2 002.222		$2\ 002.224$
2 003.334	2 003.333		$2\ 003.335$
2 004.445	2 004.444		2 004.446
2 005.556	2 005.555		2 005.557
2 006.667	2 006.666		2 006.668
2 007.778	2 007.777		2 007.779
2 008.889	2 008.888		2 008.890
2 009.999	2 009.998	V-04-490A-2000	2 010.000

- 7. Set the CW Generator to 2 000,000 MHz.
- 8. Tune the CW Generator to each of the frequencies listed below and read the frequency counter at each step. The frequency counter reading should agree with the CW Generator front panel reading within ± 1 count. In addition, the CW Generator NOT PHASE LOCKED front panel annunciator should remain off at all frequencies.

NOTE

Fast tuning of frequency may cause the NOT PHASE LOCKED annunciator to flash on momentarily. This is normal and does not indicate a malfunction.

Frequency (MHz)	Minimum Frequency (MHz)	Actual Frequency (MHz)	Maximum Frequency (MHz)
2 090.000	2 089.999		2 090.001
2 280.000	2 279.999		$2\ 280.001$
2 470.000	2 469.999		$2\ 470.001$
2 660.000	2 659.999		2660.001
2 850.000	2 849.999		2 850.001
3 040.000	3 039.999		3 040.001
3 230.000	3 229.999		3 230.001
3 420.000	3 419.999		3 420.001

(cont'd)

FREQUENCY RANGE AND RESOLUTION (cont'd)

Procedure (cont'd)

Frequency (MHz)	Minimum Frequency (MHz)	Actual Frequency (MHz)	Maximum Frequency (MHz)
3 610.000	3 609.999		3 610.001
3 800.000	3 799.999		3 800.001
3 990.000	3 989.999		3 990.001
4 180.000	4 179.999		4 180.001
4 370.000	4 369.999		4 370.001
4 560.000	4 559.999	-	4 560.001
4 750.000	4 749.999		4 750.001
4 940.000	4 939.999		4 940.001
5 130.000	5 129.999		5 130.001
5 320.000	5 319.999		5 320.001
5 510.000	5 509.999		5 510.001
5 700.000	5 699.999		5 700.001
5 900.000	5 899.999		5 900.001
6 100.000	6 099.999		6 100.001

Bands 2 and 3 Test

- 9. Tune the CW Generator to 10 000.000 MHz and select 1 kHz tuning resolution.
- 10. Tune the frequency down one increment and verify that the CW Generator frequency display changes to 9 999.998 MHz and the frequency counter reading agrees within one count.
- 11. Tune the frequency up two increments and verify that the CW Generator frequency display changes to 10 000.002 MHz. Verify also that the frequency counter reading agrees within one count.

 10 GHz frequency resolution, 2 kHz _____ (√)
- 12. Tune the CW Generator to 18 000.000 MHz and select 1 kHz tuning resolution.
- 13. Tune the frequency down one increment and verify that the CW Generator frequency display indicates 17 999.997 MHz and the frequency counter reading agrees within one count.
- 14. Tune the frequency up two increments and verify that the CW Generator frequency display indicates 18 000.003 MHz and the frequency counter reading agrees within one count.

18 GHz frequency resolution, 3 kHz _____ ($\sqrt{}$)

15. Disconnect the frequency standard cable and replace the FREQ STANDARD JUMPER between A3J9 and A3J10. Set the INT/EXT switch to INT.

4-8. FREQUENCY SWITCHING TIME TEST

Specification

Electrical Characteristics	Performance Limits	Conditions
SWITCHING TIME		
Frequency to be within the specified resolution.	<15 ms	
Amplitude to be within $\pm 3~\mathrm{dB}$ of final level after switching frequency.	<15 ms	When switching within the same frequency resolution range.

Description

This test measures the frequency switching speed. The CW Generator is remotely programmed to continuously switch between two frequencies. Its output is mixed with a local oscillator whose output frequency is set to 1 kHz above the second (or destination) frequency. The difference frequency (IF) is displayed on an oscilloscope.

Frequency switching speed is first measured in the CW Generator's base band (2.0—6.2 GHz) using an IF frequency of 1 kHz (which is the specified resolution for the base band). As the unit under test is switched from the starting frequency to the destination frequency the oscilloscope is triggered by the HP-IB controller.

As the CW Generator output changes between the two programmed frequencies the IF signal will pass through zero. This will generate a phase reversal, as shown in Figure 4-3. The last phase change of the IF frequency is the point that the frequency of the unit under test is within the specified resolution.

The amplitude recovery time is tested using the same measurement setup. The ± 3 dB amplitude points of the IF signal are calibrated on the oscilloscope display and the amplitude recovery time is tested to ensure that the IF level is within ± 3 dB of the final level (see Figure 4-4). The amplitude recovery time is only specified for frequency changes within the same frequency resolution range.

NOTE

A digitizing oscilloscope will make this measurement easier due to the ability to store and view the switching process. The test may be performed without a digitizing oscilloscope by repetitively switching the frequency of the unit under test.

Equipment

HP-IB Controller	HP 85B/82903 or HP 9836	jΑ
Local Oscillator	HP 8340A	
Mixer	RHG DMS1-18	
Oscilloscope	HP 1980B	

Performance Tests HP 8671B

PERFORMANCE TESTS

FREQUENCY SWITCHING TIME TEST (cont'd)

Procedure

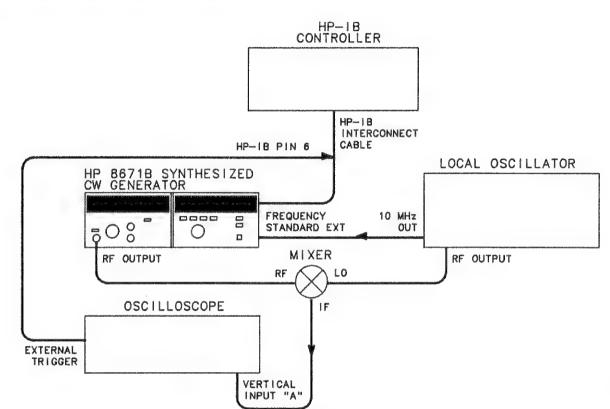


Figure 4-2. Frequency Switching Time Test Setup

Frequency Switching Time

1. Set up the equipment as shown in Figure 4-2. The external trigger input of the oscilloscope should be connected to pin 6 of the HP-IB cable. An HP-IB adapter (HP 10834A) can be used to make a permanent adapter for this test. This test may be performed by connecting the external trigger input of the oscilloscope to A2A7TP1. The test results should be identical for both methods of oscilloscope triggering.

To access A2A7TP1 the instruments protective covers must be removed. This should only be done by service-trained personnel who are aware of the hazards involved (for example, fire and electrical shock).

WARNING

- 2. Set the local oscillator to 2 100.001 MHz with an output level between +5 dBm and +8 dBm.
- 3. Set the oscilloscope to external trigger, positive slope trigger, triggered sweep mode (or NORMAL) and 2 ms per division sweep time.

FREQUENCY SWITCHING TIME TEST (cont'd)

Procedure (cont'd)

NOTE

The following programs are for the HP 9826 or HP 9836 controller. For use with the HP 85B controller, increase the wait statements by a factor of 1000. This is done because the HP 85B executes wait commands in milliseconds while the HP 9836 and HP 9826 execute wait commands in seconds.

4. Load and run the following HP-IB controller program. As the program is executing, adjust the trigger controls for a stable 1 kHz sine wave display.

- 10 CLEAR 719
 2.1 GHz, +3 dBm, Ext ALC
 20 OUTPUT 719; "A2100000Z100075"
 30 GOTO 20
- 40 END

5. Press the pause key on the controller to stop the program. Load and run the following program. The program will continue switching the CW Generator between 18 GHz and 2.1 GHz until the pause key is pressed. If necessary, adjust the oscilloscope triggering to obtain a display similar to that shown in Figure 4-3.

		 Controller talk, CW Generator listen
10	SEND 7; MTA LISTEN 19	─ 0 dB range, Ext ALC
20	OUTPUT 7; "K 0 0 0 7 5 "	0 db range, Ext ALO
		Set to 18 GHz
30	OUTPUT 7; "P18000000Z1"	5 for HP 85B (5 ms)
40	WAIT .005	0 tot till 000 (0 me)
70		Ready for change to 2.1 GHz
50	OUTPUT 7; "A2100000Z"	
60	WAIT .7	
		700 for HP 85B (700 ms)
70	OUTPUT 7; "1"	— Change frequency
80	WAIT .05	Change moderney
		50 for HP 85B (50 ms)
90	G0TO 30	
100	END	

FREQUENCY SWITCHING TIME TEST (cont'd)

Procedure (cont'd)

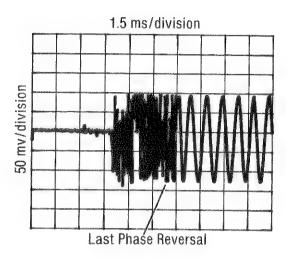


Figure 4-3. Frequency Switching Time Measurement Waveform

6. Measure the switching time by observing the signal on the oscilloscope display. The external trigger is the reference for determining switching speed. The switching time is measured from the display's left graticule to the last phase reversal (as the CW Generator passes the local oscillator frequency) before the IF signal settles into a steady frequency. Refer to Figure 4-3. Record the frequency switching time.

____<15 ms

7. Modify lines 30 and 50 to read as follows:

Frequency 2.1 GHz

30 OUTPUT 7; "A2100000Z1"

50 OUTPUT 7; "P1800000Z"

- Frequency 18 GHz

- 8. Set the local oscillator frequency to 17 999.997 MHz.
- 9. Run the modified program and measure the switching time to the last phase reversal


---<15 ms

Amplitude Recovery Time

- 10. Set the local oscillator to 6 100,001 MHz.
- 11. Load and run the following program. Adjust the vertical sensitivity and position of the display until the displayed signal indicates a peak-to-peak change of exactly 2 divisions in amplitude. This calibrates the oscilloscope to ±3 dB about 0 dBm. The smaller signal represents -3 dBm and the larger signal represents +3 dBm.

FREQUENCY SWITCHING TIME TEST (cont'd)

Procedure (cont'd)

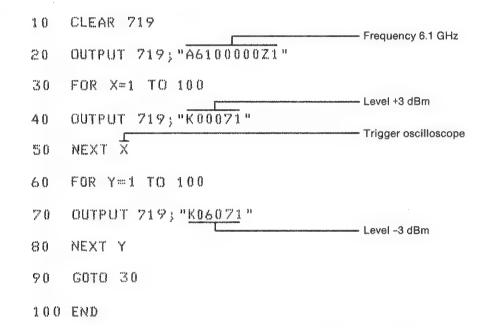

- 12. Set the top of the displayed signal to a convenient reference near the center of the display. Note the two levels for reference. The measurement will be determined by the time required before the amplitude of the IF signal stays between these two levels.
- 13. Press the pause key on the controller. Enter and run the following program. Run the program by typing RUN 110 and pressing the EXECUTE key (END LINE for the HP 85).

```
- 2.0 GHz, 0 dBm, internal ALC
110 OUTPUT 719; "A2000000Z103071"
                                               - Controller talk, CW generator listen
120 SEND 7; MTA LISTEN 19
                                                Frequency 2.1 GHz
130 OUTPUT 7; "A2100000Z1"
                                                5 for HP 85B (5 ms)
140 WAIT . 005
                                               - Frequency 6.1 GHz
150 OUTPUT 7: "A6100000Z"
                                               - 700 for HP 85B (700 ms)
170 OUTPUT 7; "1"
                                                · Change frequency
180 WAIT
                                               50 for HP 85B (50 ms)
190 GOTO 130
200 END
```

FREQUENCY SWITCHING TIME TEST (cont'd)

Procedure (cont'd)

14. Measure the amplitude recovery time. The measurement is the time from the left graticule of the display to the last time the IF signal amplitude is outside of the reference points noted in step 13. If necessary, adjust the oscilloscope triggering to obtain a display similar to that shown in Figure 4-4.

(Record Results for Step 17) _____<15 ms (Record Results for Step 20) ____<15 ms

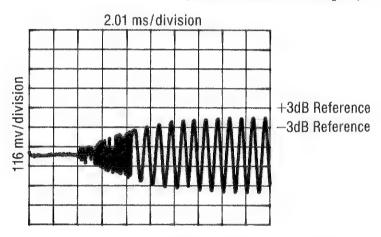


Figure 4-4. Amplitude Recovery Measurement Waveform

- 15. Set the local oscillator to 12 300.002 MHz.
- 16. Modify lines 20, 130, and 150 of the program as follows:
 - Frequency 12.3 GHz

 20 OUTPUT 719; "P12300000Z1"

 Frequency 6.2 GHz

 130 OUTPUT 7; "A6200000Z1"

 Frequency 12.3 GHz

 To output 7; "P12300000Z1"
- 17. Repeat steps 11 through 14 using the modified programs. The amplitude recovery time will be measured for the 2 kHz resolution band.
- 18. Set the local oscillator to 18,000 003 GHz.
- 19. Modify lines 20, 130, and 150 of the program as follows:
 - Frequency 18.0 GHz

 OUTPUT 719; "P1800000Z1"

 Frequency 12.4 GHz

 OUTPUT 7; "P12400000Z1"

 Frequency 18.0 GHz

 OUTPUT 7; "P1800000Z"
- 20. Repeat steps 11 through 14 using the modified program. The amplitude recovery time will be measured for the 3 kHz resolution band.
- 21. Disconnect the frequency reference from the rear panel and replace the jumper. Set the switch to INT.

4-9. OUTPUT LEVEL, HIGH LEVEL ACCURACY AND FLATNESS TEST

Specification

Electrical Characteristics	Performance Limits	Conditions
RF OUTPUT		
Output Level:		
Leveled Output	+8 dBm to -120 dBm	+15 to +35°C
Remote Programming		2.0-6.2 GHz
Absolute Level	±1.00 dB	+10 dB output level range
Accuracy (+15°C to	±1.00 dB	0 dB output level range
+35°C)	±1.50 dB	-10 dB output level range
	±1.70 dB	-20 dB output level range
		6.2-12.4 GHz
	±1.25 dB	+10 dB output level range
	±1.25 dB	0 dB output level range
	±1.75 dB	-10 dB output level range
	±1.95 dB	-20 dB output level range
		12.4—18.0 GHz
	±1.50 dB	+10 dB output level range
	±1.50 dB	0 dB output level range
	±2.10 dB	-10 dB output level range
	±2.30 dB	−20 dB output level range
Manual Absolute	Add ± 0.75 dB to remote	Absolute level accuracy
Level Accuracy	programming absolute	specifications include
	level accuracy	allowances for detector
		linearity, temperature,
		flatness, attenuator accu-
	Management of the Control of the Con	racy, and measurement
		uncertainty.
Flatness	1.50 dB	2.0 to 6.2 GHz
(0 dBm range; 15 to	2.00 dB	2.0 to 12.4 GHz
+35°C)	2.50 dB	2.0 to 18.0 GHz

Description

This test checks output level (maximum leveled power), absolute level accuracy between +8 dBm and -20 dBm, and output level flatness. The output level test uses a power meter to verify that +8 dBm can be generated over the full 2 to 18 GHz frequency range. Level flatness measures the variation in level over the various specified ranges. The high level accuracy test verifies that power levels between +8 dBm and -20 dBm are within the manual absolute level accuracy specification.

Equipment

Procedure

Output Level Test

- 1. Connect the power sensor to the power meter. Calibrate and zero the power meter.
- 2. Connect the power sensor to the RF OUTPUT connector of the CW Generator as shown in Figure 4-5.

OUTPUT LEVEL, HIGH LEVEL ACCURACY AND FLATNESS TEST (cont'd)

Procedure (cont'd)

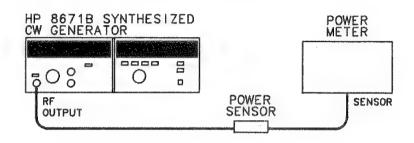


Figure 4-5. Output Level, High Level Accuracy and Flatness Test Setup

- 3. Set the CW Generator frequency to 2.0 GHz and the output level range to +10 dB.
- 4. Adjust the VERNIER control to give a power meter reading of +8 dBm.
- 5. Tune the CW Generator in 100 MHz steps from 2 to 18 GHz, adjusting the power meter's calibration factor and recording the frequency at which minimum power occurs. Reset VERNIER to read +8 dBm on the power meter at the recorded frequency to ensure that the +8 dBm power level can be met.

Frequency _____ Minimum Power >+8 dBm _____

Level Flatness

6. Set the CW Generator frequency to 2 GHz, output level to −5 dBm, and power meter to dB Relative. Slowly tune to 6.2 GHz in 100 MHz steps and record the maximum and minimum relative power outputs. Set the power meter calibration factor appropriate for each frequency. Maximum variation should be within 1.5 dB (highest point to lowest point). Continue to tune to 12.4 GHz. Maximum variation should be within 2 dB. Continue to tune to 18.0 GHz and note level variation. Maximum variation should be less than 2.5 dB.

NOTE

The specification for power output flatness is not referenced to a particular frequency. The specification represents the total power variation over the entire frequency range.

2.0—6.2 GHz	
	Minimum
	Maximum
	Total Variation<1.50 dB
2.0—12.4 GHz	
	Minimum
	Maximum
	Total Variation<2.00.dB

OUTPUT LEVEL, HIGH LEVEL ACCURACY AND FLATNESS TEST (cont'd)

Procedure	
(cont'd)	

2.0-18.0 GHz

Minimum	_
Total Variation<2.50 dB	3

High Level Accuracy Test

- 7. Connect the power sensor to the power meter. Calibrate and zero the power meter in the dBm mode.
- 8. Connect the power sensor to the RF OUTPUT connector of the CW Generator.
- 9. Set the CW Generator frequency to 2.0 GHz and output level to +8 dBm (+10 dB range and -2 dBm front panel meter setting).
- 10. Tune the CW Generator in 2 GHz steps from 2 to 18 GHz. Set the power meter's calibration factor appropriately and record the power output at each frequency in Table 4-1. The power meter readings should be within the limits specified.
- 11. Repeat steps 9 and 10 for an output level of +3 dBm (+10 dB range, -7 dBm VERNIER).
- 12. Set the CW Generator frequency to 2.0 GHz and output level to 0 dBm (0 dB range, 0 dBm VERNIER).
- 13. Tune the CW Generator in 2 GHz steps from 2 to 18 GHz. Set the power meter's calibration factor appropriately and record the power output at each frequency in Table 4-1. The power meter readings should be within the limits specified.
- 14. Repeat steps 12 and 13 for output levels of -5 dBm and -10 dBm (0 dB range).
- 15. Set the CW Generator frequency to 2.0 GHz and output level to -10 dBm (-10 dB range, 0 dBm VERNIER).
- 16. Tune the CW Generator in 2 GHz steps from 2 to 18 GHz. Set the power meter's calibration factor appropriately and record the power output at each frequency in Table 4-1. The power meter readings should be within the limits specified.
- 17. Repeat steps 15 and 16 for an output level of -20 dBm (-20 dB range, 0 dBm vernier).

OUTPUT LEVEL, HIGH LEVEL ACCURACY AND FLATNESS TEST (cont'd)

Table 4-1. Output Level, High Level Accuracy and Flatness Test Record (1 of 2)

-			Results		
Test		Min.	Actual	Max.	
High Level Accuracy					
+8 dBm (+10 dB range)	$2\mathrm{GHz}$	+6.25 dBm		+9.75 dBı	
	4 GHz	+ 6.25 dBm		+9.75 dBı	
	6 GHz	+ 6.25 dBm		+9.75 dB	
	$8\mathrm{GHz}$	+ 6.00 dBm		+10.00 dB	
	$10~\mathrm{GHz}$	$+ 6.00 \mathrm{dBm}$		+10.00 dB	
	12 GHz	+ 6.00 dBm		+10.00 dB	
	14 GHz	+ 5.75 dBm		+10.25 dB	
	16 GHz	$+5.75~\mathrm{dBm}$		+10.25 dB	
	18 GHz	+ 5.75 dBm	****	+10.25 dB	
+3 dBm (+10 dB range)	$2\mathrm{GHz}$	+ 1.25 dBm		+4.75 dB	
	$4~\mathrm{GHz}$	+ 1.25 dBm		+4.75 dB	
	$6~\mathrm{GHz}$	+ 1.25 dBm		+4.75 dB	
	$8~\mathrm{GHz}$	+ 1.00 dBm		+5.00 dB	
	$10~\mathrm{GHz}$	+ 1.00 dBm		+5.00 dB	
	$12~\mathrm{GHz}$	+ 1.00 dBm		$+5.00~{ m dB}$	
	14 GHz	$+ 0.75 \mathrm{dBm}$		+5.25 dB	
	16 GHz	+ 0.75 dBm		+5.25 dB	
	18 GHz	+ 0.75 dBm		+5.25 dB	
0 dBm (0 dB range)	2 GHz	- 1.75 dBm		+1.75 dB	
	4 GHz	- 1.75 dBm		+1.75 dE	
	$6~\mathrm{GHz}$	- 1.75 dBm		+1.75 dE	
	$8 \mathrm{GHz}$	- 2.00 dBm	Market	+2.00 dE	
	$10~\mathrm{GHz}$	- 2.00 dBm	-	+2.00 dE	
	$12~\mathrm{GHz}$	- 2.00 dBm	*****	+2.00 dE	
	$14~\mathrm{GHz}$	- 2.25 dBm	*****	+2.25 dE	
	$16~\mathrm{GHz}$	- 2.25 dBm		+2.25 dE	
	$18~\mathrm{GHz}$	- 2.25 dBm	tionale and the second	+2.25 dE	
-5 dBm (0 dB range)	$2\mathrm{GHz}$	-6.75 dBm		-3.25 dE	
	4 GHz	- 6.75 dBm	manufacture of the state of the	-3.25 dE	
	$6\mathrm{GHz}$	$-6.75 \mathrm{dBm}$		-3.25 dE	
	$8\mathrm{GHz}$	- 7.00 dBm	***************************************	-3.00 dE	
•	$10~\mathrm{GHz}$	$-7.00~\mathrm{dBm}$		-3.00 dE	
	$12~\mathrm{GHz}$	- 7.00 dBm	***************************************	-3.00 dE	
	$14~\mathrm{GHz}$	- 7.25 dBm		-2.75 dE	
	$16~\mathrm{GHz}$. – 7.25 dBm		-2.75 dE	
	$18\mathrm{GHz}$	- 7.25 dBm		-2.75 dE	
-10 dBm (0 dB range)	$2\mathrm{GHz}$	-11.75 dBm		-8.25 dE	
	4 GHz	-11.75 dBm		−8.25 dE	
	6 GHz	-11.75 dBm		-8.25 dE	
	$8\mathrm{GHz}$	-12.00 dBm		-8.00 dE	
	$10~\mathrm{GHz}$	-12.00 dBm		-8.00 dF	

OUTPUT LEVEL, HIGH LEVEL ACCURACY AND FLATNESS TEST (cont'd)

Table 4-1. Output Level, High Level Accuracy and Flatness Test Record (2 of 2)

		Iz -12.25 dBm -7.75 dBm Iz -12.50 dBm -7.50 dBm Iz -12.50 dBm -7.50 dBm Iz -12.50 dBm -7.50 dBm Iz -12.85 dBm -7.15 dBm Iz -12.85 dBm -7.15 dBm Iz -12.85 dBm -7.15 dBm Iz -22.45 dBm -7.15 dBm Iz -22.45 dBm -7.15 dBm		
Test		Min.	Actual	Max.
High Level Accuracy (cont'd)				
-10 dBm (0 dB range) (cont'd)	$12\mathrm{GHz}$	$-12.00~\mathrm{dBm}$		$-8.00~\mathrm{dBm}$
	14 GHz	-12.25 dBm		−7.75 dBm
	16 GHz	-12.25 dBm		-7.75 dBm
	$18\mathrm{GHz}$	-12.25 dBm		−7.75 dBm
-10 dBm (-10 dB range)	$2\mathrm{GHz}$	-12.25 dBm		−7.75 dBm
, , , , , , , , , , , , , , , , , , , ,	$4~\mathrm{GHz}$	-12.25 dBm		-7.75 dBm
	$6~\mathrm{GHz}$	-12.25 dBm		$-7.75~\mathrm{dBm}$
	8 GHz	-12.50 dBm		-7.50 dBm
	$10~\mathrm{GHz}$	-12.50 dBm		−7.50 dBm
	$12\mathrm{GHz}$	-12.50 dBm		−7.50 dBm
	14 GHz	-12.85 dBm		-7.15 dBm
	16 GHz	-12.85 dBm		−7.15 dBm
	$18\mathrm{GHz}$	-12.85 dBm		−7.15 dBm
-20 dBm (-20 dB range)	$2\mathrm{GHz}$	-22.45 dBm		-17.55 dBm
	4 GHz	-22.45 dBm		-17.55 dBm
	$6\mathrm{GHz}$	-22.45 dBm	8878.00.80.00.00.00.00.00.00.00.00.00.00.00	-17.55 dBm
	$8\mathrm{GHz}$	−22.70 dBm	All the second s	-17.30 dBm
	$10~\mathrm{GHz}$	-22.70 dBm		-17.30 dBm
	$12\mathrm{GHz}$	−22.70 dBm		-17.30 dBm
	14 GHz	−23.05 dBm	***************************************	-16.95 dBm
	16 GHz	-23.05 dBm		-16.95 dBm
	$18\mathrm{GHz}$	-23.05 dBm	The state of the s	-16.95 dBm

4-10. LOW LEVEL ACCURACY TEST

Specification

Electrical Characteristics	Performance Limits	Conditions
RF OUTPUT Remote Programming Absolute Level Accuracy (+15 to +35°C)	±1.90 dB ±1.90 dB plus ±0.3 dB per	2.0—6.2 GHz —30 dB output level range <-30 dB output level range
	10 dB step ±2.15 dB ±2.15 dB plus ±.3 dB per 10 dB step	6.2—12.4 GHz —30 dB output level range <-30 dB output level range
	±2.40 ±2.40 dB plus ±0.4 dB per 10 dB step	12.4—18.0 GHz -30 dB output level range <-30 dB output level range
Manual Absolute Level Accuracy	Add ±0.75 dB to remote programming absolute level accuracy	Absolute level accuracy specifications include allowances for detector linearity, temperature, flatness, attenuator accuracy and measurement uncertainty.

Description

This test checks absolute level accuracy between -30 dBm and -110 dBm. An IF signal is calibrated to the spectrum analyzer by measuring the CW Generator's RF output at -20 dBm. A reference level corresponding to the -20 dBm output is set on the spectrum analyzer and each 10 dB decrease in range is checked for a 10 dB decrease on the spectrum analyzer display.

Equipment

Power Meter	
Power Sensor	HP 8481A
Local Oscillator	HP 8340A
Mixer	RHG DMS 1—18
Spectrum Analyzer	\dots HP 8566B
40 dB Amplifier	HP 8447F
20 dB Attenuator	HP 8491B Option 020
20 dB Preamplifier	HP 8447A

Procedure

- 1. Calibrate and zero the power meter in the dBm mode.
- 2. Connect the equipment as shown in Figure 4-6.

NOTE

Connect the mixer directly to the local oscilator to avoid any power loss.

40 dB AMPLIFIER

OUTPUT

INPUT

PERFORMANCE TESTS

LOW LEVEL ACCURACY TEST (cont'd) LOCAL OSCILLATOR HP 8671B SYNTHESIZED CW GENERATOR POWER METER **Procedure** (cont'd) 0000 RF OUTPUT RF OUTPUT SPECTRUM ANALYZER POWER SENSOR STEP 2 MIXER STEP 5 RF LO 20 dB ATTENUATOR IF = 100 kHz INPUT

STEP 15

INPUT

Figure 4-6. Low Level Accuracy Test Setup

20 dB PREAMPLIFIER

OUTPUT

- 3. Set the CW Generator frequency to 2 000.000 MHz, RANGE to -20 dB, and set the VERNIER for 0 dBm.
- 4. Adjust the VERNIER for a power meter reading of $-20.00 \text{ dBm} \pm 0.01 \text{ dB}$.
- 5. Disconnect the power meter and connect the CW Generator to the mixer as shown in Figure 4-6.
- 6. Set the local oscillator to 2 000.100 MHz and output power to maximum but not greater than +8 dBm.
- 7. Set the resolution bandwidth on the spectrum analyzer to 300 Hz or less. Adjust the reference level so that the amplitude of the 100 kHz IF signal is set to a convenient horizontal graticule as a reference. This calibrates the graticule line for an absolute reference power level of -20 dBm. Enable the Delta Marker function on the spectrum analyzer, if available, for highest accuracy.
- 8. Set the range of the CW Generator 10 dB lower and adjust the CW Generator's VERNIER for a front panel meter reading of 0 dBm.
- 9. Set the spectrum analyzer reference level 10 dB lower to bring the signal level near the reference graticule line.

LOW LEVEL ACCURACY TEST (cont'd)

Procedure (cont'd)

10. Read the difference between the displayed level and the reference graticule. Calculate the actual power as follows:

NOTE

The difference is positive if the signal is above the reference graticule line, and negative if below.

Output level set in step 8.

Difference measured in step 10.

Actual level.

Record the actual level calculated in Table 4-2. The level reading should be within the limits specified.

- 11. Repeat steps 8 through 10, with CW Generator range settings of -40 dB and -50 dB in step 8. Record the output level readings in Table 4-2.
- 12. Note the CW Generator's signal level (at -50 dBm) on the spectrum analyzer display. Remove the 20 dB attenuator, set the spectrum analyzer reference level 20 dB higher, and adjust the spectrum analyzer to bring the peak of the IF signal back to the same reference level.
- 13. Repeat steps 8 through 10 with CW Generator settings of −60 dB through −90 dB. Record the output level readings in Table 4-2.
- 14. Note the CW Generator's level (at -90 dBm) on the spectrum analyzer display. This will be the reference in step 15.
- 15. Connect the 20 dB Preamplifier as shown in Figure 4-6. Set the spectrum analyzer IF sensitivity 20 dB higher, and set the vertical sensitivity to bring the signal back to the reference level noted in step 14.
- 16. Repeat steps 8 through 10, with CW Generator range settings of -100 dB and -110 dB. Record the output level readings in Table 4-2.
- 17. Repeat steps 3 through 16 for CW Generator frequencies of 10 GHz and 18 GHz. Record the output level readings in Table 4-2.

Performance Tests

PERFORMANCE TESTS

LOW LEVEL ACCURACY TEST (cont'd)

Table 4-2. Low Level Accuracy Test Record

Total	Results			
Test	Mîn.	Actual	Max.	
2.0 GHz				
-30 dBm	-32.65 dBm		−27.35 dBr	
-40 dBm	-42.95 dBm		−37.05 dBr	
-50 dBm	-53.25 dBm		-46.75 dBr	
-60 dBm	-63.55 dBm		−56.45 dBr	
-70 dBm	-73.85 dBm		−66.15 dBr	
-80 dBm	-84.15 dBm		-75.85 dBr	
-90 dBm	-94.45 dBm		−85.55 dBr	
-100 dBm	-104.75 dBm		−95.25 dBr	
-110 dBm	-115.05 dBm		-104.95 dBı	
10.0 GHz				
-30 dBm	-32.90 dBm		-27.10 dB	
-40 dBm	-43.20 dBm		-36.80 dB	
-50 dBm	-53.50 dBm	-	-46.50 dB	
-60 dBm	-63.80 dBm		-56.20 dB	
-70 dBm	$-74.10~\mathrm{dBm}$		-65.90 dB	
-80 dBm	-84.40 dBm		-75.60 dB	
-90 dBm	-94.70 dBm	4.000 M M0000 W M0000	-85.30 dB	
-100 dBm	-105.00 dBm		-95.00 dB	
-110 dBm	-105.30 dBm		-104.70 dB	
18.0 GHz			D. Organisa and D. Organisa an	
-30 dBm	-33.45 dBm		-26.55 dB	
-40 dBm	-43.85 dBm		−36.15 dB	
-50 dBm	-54.25 dBm		-45.75 dB	
-60 dBm	-64.65 dBm		−55.35 dB	
-70 dBm	-75.05 dBm		-64.95 dB	
-80 dBm	-85.45 dBm	to the second se	-74.55 dB	
-90 dBm	-95.95 dBm		-84.15 dB	
-100 dBm	-106.35 dBm		−93.75 dB	
-110 dBm	-107.75 dBm		$-103.35\mathrm{dB}$	

4-11. OUTPUT LEVEL SWITCHING TIME TEST

Specification

Less than 20 ms to be within ± 1 dB of the final level.

Description

This test measures the output level switching speed. The measuring system is set up to trigger the oscilloscope when the unit under test has finished accepting the output level data from the controller. The R.F. output is detected and coupled to the oscilloscope's vertical input. The time to complete switching (which includes settling time) is viewed on the oscilloscope display.

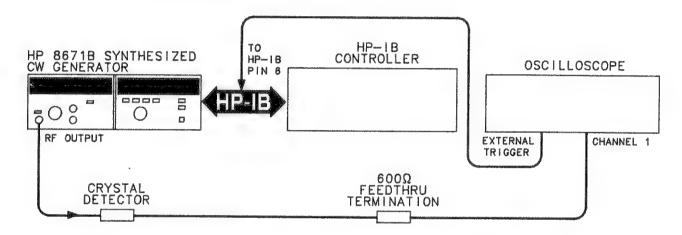


Figure 4-7. Output Level Switching Time Test Setup

Equipment

Procedure

1. Set up the equipment as shown in Figure 4-7. The external trigger input of the oscilloscope should be connected to pin 6 of the HP-IB cable or A2A9U14, pin 15. An HP-IB adapter (HP 10834A) can be used to make a permanent trigger adapter for this test.

WARNING

To access A2A9U14 the instrument's protective cover must be removed. This should be performed only by service-trained personnel who are aware of the hazards involved (for example, fire and electrical shock).

OUTPUT LEVEL SWITCHING TIME TEST (cont'd)

Procedure (cont'd)

2. Set the oscilloscope for external triggering, positive trigger slope, triggered sweep mode (or NORM) and 2 ms per division sweep time.

NOTE

The following programs are for the HP 9826 or HP 9836 controller. For use with the HP 85B controller, increase the wait statements by a factor of 1000. This is necessary because the HP 9826 and HP 9836 execute wait commands in seconds while the HP 85B executes wait commands in milliseconds.

- 3. Load and run the following HP-IB controller program. As the program is executing, adjust the trigger controls for a stable oscilloscope display.
 - 10 CLEAR 719
 - 20 GUTPUT 719; "A300000Z103075"
 - 30 GOTO 20
 - 40 END
- 4. Press the pause key on the controller. Load the following HP-IB controller program.
 - 10 SEND 7 MTA LISTEN 19
 - 20 FOR X=1 TO 50
 - 30 OUTPUT 7; "KO"
 - 40 WAIT .03
 - S0 OUTPUT 7; "K" Ready for change to -110 dB Range
 - 60 WAIT .7
 - 700 for HP 85B (700 ms)
 - 80 WAIT .05 ______ 50 for HP 85B (50 ms)
 - 90 NEXT X
 - 100 END

 $\leq 20 \text{ ms}$

PERFORMANCE TESTS

OUTPUT LEVEL SWITCHING TIME TEST (cont'd)

Procedure (cont'd)

NOTE

Run this program only as long as necessary to make the level switching measurements. This measurement cycles the attenuator which causes mechanical wear. The program limits the number of cycles to 50, however, if a digitizing oscilloscope is available only one cycle is needed.

5. Run the program and measure the switching time by observing the signal on the oscilloscope display. Refer to Figure 4-8.

Level Switching Time

2.01 ms/division

Figure 4-8. Output Level Switching Time Measurement Waveform

4-12. HARMONICS, SUBHARMONICS, & MULTIPLES TEST

Specification

Electrical Characteristics	Performance Limits	Conditions
SPECTRAL PURITY		
Harmonics	<-25 dBc	Output level +8 dBm
Subharmonics and	<-25 dBc	Output level +8 dBm
Multiples Thereof		

Description

This test checks the amplitude of various harmonics of the CW Generator's output signal in the multiplied frequency bands (>6.2 GHz), subharmonics and multiples (harmonics of the internal fundamental signal) are also checked for specific levels. Reasonable care must be taken to ensure that the harmonics are not being generated by the spectrum analyzer.

Equipment

Procedure

1. Connect the CW Generator RF OUTPUT to the input of the spectrum analyzer as shown in Figure 4-9.

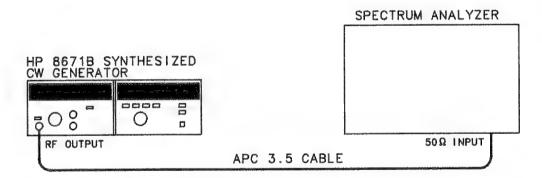


Figure 4-9. Harmonics, Subharmonics, and Multiples Test Setup

- 2. Tune the CW Generator to 4 000.000 MHz and output level of +8 dBm.
- 3. Set the spectrum analyzer controls to display the fundamental signal. Set the resolution bandwidth to 10 kHz and the input attenuation to 40 dB. Adjust the log reference level to set the displayed signal at the top graticule line of the display.
- 4. Tune the CW Generator to 2 000.000 MHz. The second harmonic, now displayed at 4 000.000 MHz, should be greater than 25 dB below the reference.

5. Repeat steps 2 through 4, at the other CW Generator frequencies listed, to check each harmonic, subharmonic, and multiple listed in the following table. Record the measurements in Table 4-3.

HARMONICS, SUBHARMONICS, & MULTIPLES TEST (cont'd)

Procedure (cont'd)

NOTE

This procedure may be repeated for any fundamental frequency of interest within the CW Generator frequency range.

Harmonics, Subharmonics, and Multiples

Set Signal Generator to		Check Harmoni	c Levels at:	
FUNDAMENTAL	HARMONIC	HARMONIC SUBHARMONIC		MULTIPL
(GHz)	(GHz)	1/3	1/2	2/3
2.000 000	4.000 000			
4.000 000	8.000 000	STEPPEN AND AND AND AND AND AND AND AND AND AN		
$6.000\ 000$	12.000 000			
8.000 000	16.000 000		4.000 000	
10.000 000	20.000 000		5.000 000	
11.000 000	22.000 000	1	5.500 000	
14.000 000		4.666 667		9.333 333
16.000 000		5.333 333		10.666 667
18.000 000	No. of the Control of	6.000 000		12.000 000
LIMITS	<-25 dBc	25	dBc	<u> </u>

HP 8671B Performance Tests

PERFORMANCE TESTS

HARMONICS, SUBHARMONICS, & MULTIPLES TEST (cont'd)

Table 4-3. Harmonics, Subharmonics & Multiples Test Record

Y1		Results		
	Test	Min.	Actual	Max.
Fundamental	Harmonic or Subharmonic			
2.000 000 GHz	4.000 000 GHz 2f		, , , , , , , , , , , , , , , , , , ,	. −25 dB
4.000 000 GHz	8.000 000 GHz 2f		Market	−25 dB
$6.000~000~\mathrm{GHz}$	12.000 000 GHz 2f			−25 dB
8.000 000 GHz	16.000 000 GHz 2f			_25 dB
$8.000~000~{ m GHz}$	4.000 000 GHz 1/2f			−25 dB
10.000 000 GHz	20.000 000 GHz 2f			−25 dB
$10.000\ 000\ \mathrm{GHz}$	5.000 000 GHz 1/2f			$-25 \mathrm{dB}$
$11.000\ 000\ \mathrm{GHz}$	22.000 000 GHz 2f			
11.000 000 GHz	$5.000~000~\mathrm{GHz}~1/2\mathrm{f}$			_ −25 dB
14.000 000 GHz	4.666 667 GHz 1/3f			−25 dB
14.000 000 GHz	9.33 3333 GHz 2/3f			_ −25 dB
16.000 000 GHz	5.333 333 GHz 1/3f			_ −25 dB
16.000 000 GHz	10.666 667 GHz 2/3f			−25 dB
$18.000\ 000\ \mathrm{GHz}$	6.000 000 GHz 1/3f		***************************************	_ −25 dB
18.000 000 GHz	12.000 000 GHz 2/3f			_ -25 dB

4-13. NON-HARMONICALLY RELATED SPURIOUS SIGNALS TEST

Specification

Electrical Characteristics	Performance Limits	Conditions
SPECTRAL PURITY		
Spurious		
Non-Harmonically	<-70 dBc	2.0 to 6.2 GHz
Related	<-64 dBc	6.2 to 12.4 GHz
	<-60 dBc	12.4 to 18.0 GHz

Description

This test checks for any spurious signals in the CW Generator's RF output signal. The spectrum analyzer is calibrated for a reference level of -50 dBc and is tuned to any frequency from 2.0 to 6.2 GHz in search of spurious signals.

NOTE

The non-harmonically related spurious signals will always increase in amplitude above 6.2 GHz, due to multiplication in the internal YIG tuned multiplier. The increase is determined by a strict mathematical relationship. Therefore, satisfactory performance in the 2 to 6.2 GHz range will always ensure meeting the less stringent specification in the multiplied ranges, that is, from 6.2 to 18.0 GHz.

Equipment

Spectrum Analyzer HP 8566B

Procedure

1. Connect the CW Generator's RF OUTPUT to the input of the spectrum analyzer as shown in Figure 4-10.

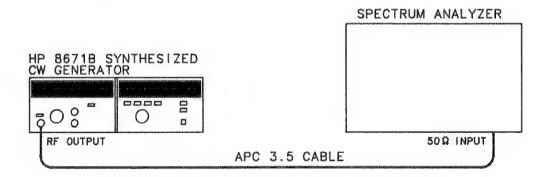


Figure 4-10. Non-Harmonically Related Spurious Signals Test Setup

- 2. Tune the CW Generator to 3 000.000 MHz and set the output level to -50 dBm.
- 3. Set the spectrum analyzer controls to display the fundamental signal. Set the resolution bandwidth to 1 kHz and the frequency span per division to 10 kHz.
- 4. Set the spectrum analyzer controls so that the carrier signal is at the top graticule line.

NON-HARMONICALLY RELATED SPURIOUS SIGNALS TEST (cont'd)

Procedure (cont'd)

- 5. Using the RANGE selector, increase the CW Generator's output level to 0 dBm. Do not adjust the spectrum analyzer amplitude calibration. The top graticule line now represents -50 dBc.
- 6. Tune the spectrum analyzer to any desired frequency in search of non-harmonically related spurious signals. Verify that any signals found are non-harmonically related and are not generated by the spectrum analyzer. Verify that the spurious signals are below the specified limits. Record the results.

	Carrier Frequency	Spurious Signal Frequency	Spurious Signal Level
	3 000 MHz 3 000 MHz		
	Repeat step 2 through 6 for a		
f	rom 2.0 to 6.2 GHz provides bublished specifications fro	a high level of confidence t	ly related spurious sign hat the instrument meet

4-14. POWER LINE RELATED SPURIOUS SIGNALS TEST

Specification

Electrical Characteristics	Performance Limits	Conditions
SPECTRAL PURITY		
Power line related and		2.0—6.2 GHz
fan rotation related	-50 dBc	<300 Hz offset from carrier
within 5 Hz below line frequencies and	−60 dBc	300 Hz to 1 kHz offset from carrier
multiples therof	−65 dBc	>1 kHz offset from carrier
	$-44~\mathrm{dBc}$	6.2—12.4 GHz <300 Hz offset from carrier
	-54 dBc	300 Hz to 1 kHz offset from carrier
	−59 dBc	>1 kHz offset from carrier
	40 dBc 50 dBc	12.4—18.0 GHz <300 Hz offset from carrier 300 Hz to 1 kHz offset from carrier
	-55 dBe	>1 kHz offset from carrier

Description

The Unit Under Test and local oscillator are isolated from vibration by placing the instruments on two-inch thick foam pads. This eliminates the effects of microphonic spurious signals due to vibrations..

The primary power source is isolated from the power source used for the spectrum analyzer and the local oscillator to differentiate the power line related spurious signals from other power line related spurious signals.

NOTE

The Unit Under Test must be operated at a power line frequency different than that of the local oscillator and spectrum analyzer. This avoids the summing of the power line spurious signals.

Equipment

Local Oscillator	HP 8340A
Spectrum Analyzer	HP 3580A
Mixer	RHG DMS1-18
Variable Frequency AC Power Source	
W. V	C 310 1 T 1

California Instruments

Procedure

1. Place the CW Generator on a 2-inch foam pad. Connect the equipment as shown in Figure 4-11.

NOTE

Connect the mixer directly to the local oscillator to avoid any power loss.

POWER LINE RELATED SPURIOUS SIGNALS TEST (cont'd)

Procedure (cont'd)

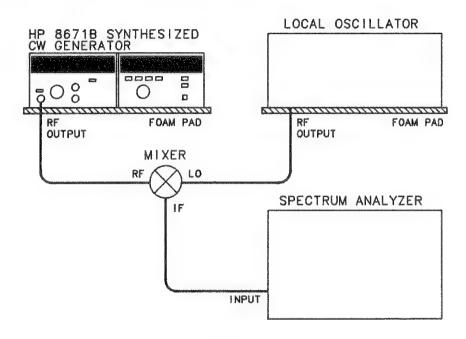


Figure 4-11. Power Line Related Spurious Signals Test Setup

- 2. Tune the CW Generator to 3 000.000 MHz and set the output level to -20 dBm.
- 3. Set the local oscillator to 3 000.020 MHz at +7 dBm.
- 4. Set the spectrum analyzer start frequency to 20 kHz, resolution bandwidth to 3 Hz.
- 5. Set the spectrum analyzer frequency span per division to 50 Hz. Set the spectrum analyzer controls so the peak of the 20 kHz signal is at the top graticule line. Verify that the line related spurious signals of the CW Generator do not exceed the values shown below. Record the highest spurious signal level in each offset band.

$$2.0-6.2~\mathrm{GHz}$$
 <300 Hz offset ______-50 dBc
 $300~\mathrm{Hz}-1~\mathrm{kHz}$ offset _____-60 dBc

6. Set the spectrum analyzer frequency span per division to 500 Hz. Measure and record the highest spurious signal level.

$$2.0 - 6.2 \,\mathrm{GHz}$$
 $>1 \,\mathrm{kHz}$ offset ______ -65 dBc

7. Tune the CW Generator and the local oscillator to 7 000.000 MHz and 7 000.020 MHz respectively.

Performance Tests HP 8671B

PERFORMANCE TESTS

POWER LINE RELATED SPURIOUS SIGNALS TEST (cont'd)

Procedure (cont'd)

8. Set the spectrum analyzer frequency span per division to 50 Hz. Set the spectrum analyzer controls so that the peak of the 20 kHz signal is at the top graticule line. Verify that the line related spurious signals of the CW Generator do not exceed the values shown below. Record the highest spurious signal level in each offset band.

 $6.2 - 12.4 \,\mathrm{GHz}$ <300 Hz offset frequency _____ -44 dBc

300 Hz — 1 kHz offset frequency — — — — — 54 dBc

Set the spectrum analyzer frequency span per division to 500 Hz. Measure and record the spurious signal levels.

6.2 — 12.4 GHz >1 kHz offset frequency ______ -59 dBc

- 10. Tune the CW Generator and the local oscillator to 16 000.000 MHz and 16 000.020 MHz respectively.
- 11. Set the spectrum analyzer frequency span per division to 50 Hz. Set the spectrum analyzer controls so that the 20 kHz signal is at the top graticule line. Verify that the line related spurious signals of the CW Generator do not exceed the values shown in the table. Record the highest spurious signal level in each offset band.

12. Set the spectrum analyzer frequency span per division to 500 Hz. Measure and record the spurious signal levels.

 $12.4 - 18.0 \,\mathrm{GHz}$ >1 kHz offset frequency _____ -55 dBc

4-15. SINGLE-SIDEBAND PHASE NOISE TEST

Specification

Electrical Characteristics	Performance Limits	Conditions
SPECTRAL PURITY		
Single-sideband		2.0 — 6.2 GHz
Phase Noise	$-58~\mathrm{dBc}$	10 Hz offset from carrier
(1 Hz bandwidth)	$-70~\mathrm{dBe}$	100 Hz offset from carrier
	$-78~\mathrm{dBc}$	1 kHz offset from carrier
	$-86~\mathrm{dBc}$	10 kHz offset from carrier
	$-110~\mathrm{dBc}$	100 kHz offset from carrier
		6.2 — 12.4 GHz
	-52 dBc	10 Hz offset from carrier
	$-64~\mathrm{dBc}$	100 Hz offset from carrier
	$-72~\mathrm{dBc}$	1 kHz offset from carrier
	-80 dBe	10 kHz offset from carrier
	-104 dBc	100 kHz offset from carrier
4		12.4 — 18.0 GHz
	-48 dBc	10 Hz offset from carrier
	-60 dBc	100 Hz offset from carrier
The state of the s	-68 dBc	1 kHz offset from carrier
The state of the s	-76 dBe	10 kHz offset from carrier
Water	-100 dBc	100 kHz offset from carrier

Description

The RF output of the CW Generator is mixed with a local oscillator to obtain a 40 kHz or 200 kHz IF signal. The phase noise sidebands are observed on a spectrum analyzer. Correction factors are applied to compensate for using the spectrum analyzer in the log mode, for local oscillator noise contributions, and for using bandwidths wider than 1 Hz.

NOTE

Normally, phase quadrature needs to be maintained between the CW Generator and the local oscillator for true phase noise measurement. However, the additional amplitude noise components are so small that they are not significant in these tests.

Equipment

Local Oscillator	HP 8340A
Low Frequency Spectrum Analyzer	HP 3580A
High Frequency Spectrum Analyzer	
Mixer	RHG DMS1-18

SINGLE-SIDEBAND PHASE NOISE TEST (cont'd)

NOTE

The signal-to-phase noise ratio as measured must be corrected to compensate for 3 errors contributed by the measurement system. These are

- a. Using the spectrum analyzer in the log mode requires a $+2.5 \ dB$ correction.
- b. Equal noise contributed by the local oscillator requires $a-3\ dB$ correction.
- c. The spectrum analyzer noise measurement must be normalized to a 1 Hz noise equivalent bandwidth. The noise equivalent bandwidth for HP spectrum analyzers is 1.2 times the 3 dB bandwidth.

For a 3 Hz bandwidth, the correction factor for the normalized measurement bandwidth would be:

Normalizing Factor
$$dB = 10 \log (1.2 \times 3 \text{ Hz/1Hz})$$

= 5.56 dB .

The total correction for 3 Hz bandwidth would be:

True measurement (dBc) = Reading (dBc) - 5.56 + 2.5 - 3 = Reading (dBc) - 6.06 dB.

Procedure

- 1. Set the low frequency spectrum analyzer's start frequency to 40 kHz, resolution bandwidth to 1 Hz, and frequency span per division to 5 Hz.
- 2. Connect the equipment as shown in Figure 4-12.

NOTE

Connect the mixer directly to the local oscillator to avoid any power loss.

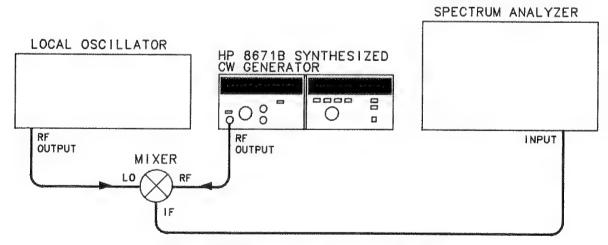


Figure 4-12. Single-Sideband Phase Noise Test Setup

- 3. Tune the CW Generator to 6 100.000 MHz and set the output level to -20 dBm.
- 4. Set the local oscillator to 6 100,040 MHz at +8 dBm.

SINGLE-SIDEBAND PHASE NOISE TEST (cont'd)

Procedure (cont'd)

- 5. Set the spectrum analyzer controls so that the peak of the 40 kHz signal is at the top graticule line.
- 6. Observe the phase noise level 10 Hz from the carrier. It should be greater than 56.7 dB below the carrier. Record the measured level.

- 7. Tune the CW Generator and the local oscillator to 12 200.000 MHz and 12 200.040 MHz respectively.
- 8. Observe the phase noise level 10 Hz from the carrier. It should be greater than 50.07 dB below the carrier. Record the measured level.

- 9. Tune the CW Generator and the local oscillator to 18 000.000 MHz and 18 000.039 MHz respectively.
- 10. Observe the noise level 10 Hz from the carrier. It should be greater than 46.7 dB below the carrier. Record the measured level.

- 11. Set the spectrum analyzer controls for a resolution bandwidth of 3 Hz and a frequency span per division of 20 Hz. Using a 3 Hz bandwidth requires a 6.06 dB correction factor.
- 12. Repeat steps 3 through 10 except observe the noise 100 Hz from the carrier. Record the results below.

Frequency	Measured	Correction	Actual	Limit
6100.000 MHz 12 200.000 MHz 18 000.000 MHz		-6.06 dB = -6.06 dB = -6.06 dB =		-70 dBc -64 dBc -60 dBc

- 13. For the remainder of this procedure, use the high frequency spectrum analyzer. Set the spectrum analyzer resolution bandwidth to 30 Hz and frequency span per division to 200 Hz. The 30 Hz bandwidth requires 16.06 dB correction.
- 14. Tune the CW Generator and the local oscillator to 6 100.000 MHz and 6 100.200 MHz respectively.

SINGLE-SIDEBAND PHASE NOISE TEST (cont'd)

Procedure (cont'd)

- 15. Tune the spectrum analyzer to place the 200 kHz IF signal at the left edge of the display. Set the spectrum analyzer controls to place the peak of the signal at the top graticule line. Increase the log reference level control to move the peak of the carrier 20 dB above the top graticule line. (The top graticule line is now -20 dBc.)
- 16. Observe the phase noise level 1 kHz from the carrier. The observed level should be greater than 62 dB below the carrier. Record the measured level.

Measured _____ Correction -16.06 dB Actual Level _____<-78 dBc

- 17. Tune the CW Generator and the local oscillator to 12 200.000 MHz and 12 200.200 MHz respectively.
- 18. Observe the noise level 1 kHz from the carrier. The observed level should be greater than 56 dB below the carrier. Record the measured level.

Measured _____ Correction -16.06 dB Actual Level _____ <-72 dBc

- 19. Tune the CW Generator and the local oscillator to 18 000.000 MHz and 18 000.200 MHz respectively.
- 20. Observe the noise level 1 kHz from the carrier. The observed level should be greater than 52 dB below the carrier. Record the measured level.

Measured _____ Correction -16.06 dB Actual Level _____<-68 dBc

- 21. Set the spectrum analyzer for a resolution bandwith of 300 Hz and a frequency span per division of 2 kHz. Using a 300 Hz bandwidth requires a 26.06 dB correction factor.
- 22. Repeat steps 14 through 20 except observe the noise 10 kHz from the carrier. Record the results below.

Frequency	Measured	Correction	Actual	Limit
6100.000 MHz 12 200.000 MHz 18 000.000 MHz		-26.06 dB -26.06 dB = -26.06 dB =		-86 dBc -80 dBc -76 dBc

23. Set the spectrum analyzer controls for a resolution bandwidth of 3 kHz and a frequency span per division of 20 kHz. Using a 3 kHz bandwidth requires a 36.06 dB correction factor.

SINGLE-SIDEBAND PHASE NOISE TEST (cont'd)

Procedure (cont'd)

24. Repeat steps 14 through 20 except observe the noise 10 kHz from the carrier. Record the results below.

Frequency	Measured	Correction	Actual	Limit
6100,000 MHz		-36.06 dB =		-110 dBc
12 200.000 MHz		-36.06 dB =		-100 dBc
18 000.000 MHz	400-0-0-	-36.06 dB =		$-100~\mathrm{dBc}$

4-16. INTERNAL TIME BASE AGING RATE

Specification

Electrical Characteristics	Performance Limits	Conditions	
FREQUENCY			
Reference Oscillator Frequency	10 MHz	After a 10 day warmup	
Aging Rate	$<5 \times 10^{-10}/\text{day}$	(typically 24 hours in a normal operating environment)	
Accuracy and Stability	Same as reference oscillator	/	

Description

A reference signal from the CW Generator (10 MHz OUT) is connected to the oscilloscope's vertical input. A frequency standard (with long term stability greater than 1 \times 10⁻¹⁰) is connected to the trigger input. The time required for a specific phase change is measured immediately and after a period of time. The aging rate is inversely proportional to the absolute value of the difference in the measured times.

Equipment

NOTE

Be sure the CW Generator has had 10 days to warm up before beginning this test. If the CW Generator was disconnected from the power line for less than 24 hours, only a 24 hour warm-up is needed.

Procedure

- 1. Set the rear panel FREQ REFERENCE INT-EXT switch to the INT position.
- 2. Connect the equipment as shown in Figure 4-13.

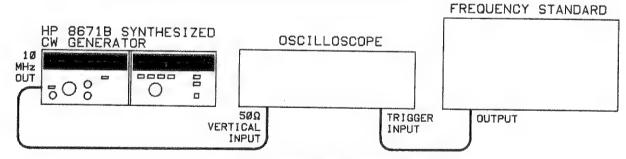


Figure 4-13. Internal Time Base Aging Rate Test Setup

3. Adjust the oscilloscope controls for a stable display of the 10 MHz CW Generator output.

INTERNAL TIME BASE AGING RATE (cont'd)

Procedure (cont'd)

4. Measure the time required for a phase change of 360°. Record the time (T1) in

 $T_1 = \underline{\hspace{1cm}} s$

5. Wait for a period of time (from 3 to 24 hours) and re-measure the phase change time. Record the period of time between measurements (T2) in hours and the new phase change time (T_3) in seconds.

 $T_2 = \underline{\hspace{1cm}} h$

 $T_3 = \underline{\hspace{1cm}} s$

6. Calculate the aging rate from the following equation:

Aging Rate =
$$\left| \left(\frac{1 \text{ cycle}}{f} \right) \left(\frac{1}{T_1} - \frac{1}{T_3} \right) \left(\frac{T}{T_2} \right) \right|$$

where: 1 cycle = the phase change reference for the time measurement (in this case, 360°)

f = CW Generator's reference output frequency (10 MHz)

T =specified time for aging rate (24h)

 $T_1 = initial time measurement(s) for a 360° (1 cycle) change$

 T_2 = time between measurements (h)

 $T_3 = \text{final time measurement(s) for a } 360^{\circ} \text{ (1 cycle) change}$

for example:

$$\begin{array}{ccc} \text{if} & T_1 = 351s \\ & T_2 = 3h \\ & T_3 = 349s \end{array}$$

$$T_2 = 3h$$

$$T_3 = 3498$$

then:

Aging Rate =
$$\left| \left(\frac{1 \text{ cycle}}{10 \text{ MHz}} \right) \left(\frac{1}{351 \text{s}} - \frac{1}{349 \text{s}} \right) \left(\frac{24 \text{h}}{3 \text{h}} \right) \right|$$
$$= 1.306 \times 10^{-11}$$

7. Verify that the aging rate is less than 5×10^{-10} .

NOTE

If the absolute frequencies of the frequency standard and the CW Generator's reference oscillator are extremely close, the measurement time in steps 5 and 6 (T_1 and T_3) can be reduced by measuring the time required for a phase change of something less than 360°. Change 1 cycle in the formula (i.e., $180^{\circ} = 1/2$ cycle, $90^{\circ} = 1/4$ cycle).

Aging Rate $\leq 5 \times 10^{-10}$ /day

Table 4-4. Performance Test Record (1 of 6)

fodel 86' ynthesiz	71B zed CW Generator		Tested by			
	umber		Date			
ara.	Test			Results		
10.	FOUL		Min.	Actual	Max.	
-7.	FREQUENCY RANGE AND RESOLUTION TEST					
	Range (MHz)					
de la constante de la constant	Baseband Test	3 000.000	2 999,999		2 000 00	
	Daschana 10st	2 000.000	1 999.999		3 000.00	
		2 000.000	1	, A-0.000 to the second	2 000.00	
		2 000.001	2 000.000		2 000.00	
		2 001.112	$\begin{array}{c c} 2\ 001.111 \\ 2\ 002.222 \end{array}$		2 001.11	
		2 003.334	2 003.333		2 002.22	
		2 004.445	2 003.333		2 003.33	
consideration of the second		2 005.556	2 004.444		2 004.44	
		2 006.667	2 006.666		2 005.5	
		2 007.778	2 007.777		2 006.66	
and the second		2 008.889	2 007.777	10.000 A. 00.000 A.	2 007.7	
After a second		2 009,999	2 008.888		2 008.89	
		2 VVə.əəə	2 009.990		2 010.00	
		2090.000	2089.999	· · · · · · · · · · · · · · · · · · ·	2090.00	
WWW.		$2\ 280.000$	2 279.999		2 280.00	
		2 470.000	2 469.999		2 470.00	
		2660.000	2 659.999		2 660.00	
		2 850.000	2 849.999		2 850.00	
		3 040.000	3 039.999		3 040.00	
		3 230.000	3 229.999		3 230.00	
		3 420.000	3 419.999	A Land Control of the	3 420.00	
		3 610.000	3 609.999		3 610.00	
		3 800.000	3 799.999		3 800.00	
		3 990.000	3 989.999		3 990.00	
***************************************		4 180.000	4 179.999		4 180.00	
		4 370.000	4 369.999	-4	4 370.00	
		4 560,000	4 559.999		4 560.00	
		4 750.000	4 749.999		4 750.00	
		4 940.000	4 939.999		4 940.00	
		5 130.000	5 129.999		5130.00	
Million Address of the Address of th		5 320.000	5 319.999		5320.00	
		5 510.000	5 509,999		5510.00	
		5 700.000	5 699.999		5 700.00	
		5 900.000	5 899.999		5 900.00	
		6 100.000	6 099.999		6 100.00	
В	Bands 2 and 3 Test 10 GHz, 2	2 kHz Resolution		()		
	,	3 kHz Resolution	44-1	(\sqrt{\sqrt{\sqrt{\sqrt{\sqrt{\colored}}}}		

Table 4-4. Performance Test Record [2 of 6]

n	-			Results	
Para. No.	Test		Min.	Actual	Max.
4-8.	FREQUENCY SWITCHING TIME TES	T			
	Frequency Switching				
	18 GHz to 2.1 GHz				15 ms
	2.1 GHz to 18 GHz			Marie Control of the	15 ms
	Amplitude Recovery				
	2.1 to 6.1 GHz, 1 kHz reso	olution band			15 ms
	6.2 to 12.3 GHz, 2 kHz re				15 ms
	12.4 to 18.0 GHz, 3 kHz re	esolution band			15 ms
4-9.	OUTPUT LEVEL, HIGH LEVEL ACCURA	ACY AND FLATNESS TEST			
	Output Level				
	Frequency and Power at M 2.0—18.0 GHz	Inimum Power Point			
	Frequency Minimum power		+8 dBm	PROFESSION AND ADMINISTRATION AD	
	Level Flatness (total variation)				
	2.0—6.2 GHz				1 50 JD
	2.0—12.4 GHz				1.50 dB 2.00 dB
	2.0—18.0 GHz		THE PART AND ADDRESS OF THE PA		2.50 dB
	High Level Accuracy				
	+8 dBm (+10 dB range)	2 GHz	+6.25 dBm	Addition	+ 9.75 dB
		4 GHz	+6.25 dBm		+ 9.75 dB
		6 GHz	+6.25 dBm	4	+ 9.75 dB
		8 GHz	+6.00 dBm		+10.00 dB
		10 GHz 12 GHz	+6.00 dBm		+10.00 dB
		14 GHz	+6.00 dBm +5.75 dBm		+10.00 dB +10.25 dB
		16 GHz	+5.75 dBm	· ·	+10.25 dB
		18 GHz	+5.75 dBm		+10.25 dB
	+3 dBm (+10 dB range)	2 GHz	+1.25 dBm		+4.75 dBr
	· • • • • • • • • • • • • • • • • • • •	4 GHz	+1.25 dBm		+4.75 dBr
		$6\mathrm{GHz}$	+1.25 dBm		+4.75 dBr
		8 GHz	+1.00 dBm		+5.00 dBr
		10 GHz	+1.00 dBm		+5.00 dBr
		12 GHz	+1.00 dBm		+5.00 dBr
		$14~\mathrm{GHz}$ $16~\mathrm{GHz}$	+0.75 dBm +0.75 dBm		+5.25 dBr
		18 GHz	+0.75 dBm +0.75 dBm		+5.25 dBr +5.25 dBr
	0 dBm (0 dB range)	2 GHz	-1.75 dBm		+1.75 dBn
	(4 GHz	-1.75 dBm		+1.75 dBn
		$6\mathrm{GHz}$	$-1.75~\mathrm{dBm}$		+1.75 dBn
		$8\mathrm{GHz}$	-2.00 dBm		+2.00 dBn

Table 4-4. Performance Test Record (3 of 6)

Para. No.		Results			
	Test		Min.	Actual	Max.
4-9.	OUTPUT LEVEL, HIGH LEVEL AC FLATNESS TEST (cont'd)	CURACY AND			
	High Level Accuracy (cont'd)				
	0 dBm (0 dB range) (cont'		$-2.00~\mathrm{dBm}$	-	+2.00 dBr
		$12\mathrm{GHz}$	-2.00 dBm		+2.00 dBr
		14 GHz	-2.25 dBm	**************************************	+2.25 dBr
		$16~\mathrm{GHz}$	$-2.25~\mathrm{dBm}$		+2.25 dBr
		$18\mathrm{GHz}$	-2.25 dBm		+2.25 dBr
	-5 dBm (0 dB range)	$2\mathrm{GHz}$	-6.75 dBm		-3.25 dBı
		4 GHz	-6.75 dBm		-3.25 dBr
		$6~\mathrm{GHz}$	$-6.75~\mathrm{dBm}$		-3.25 dB ₁
		$8\mathrm{GHz}$	$-7.00~\mathrm{dBm}$		-3.00 dBı
		$10~\mathrm{GHz}$	$-7.00~\mathrm{dBm}$		-3.00 dBr
		$12\mathrm{GHz}$	$-7.00~\mathrm{dBm}$		-3.00 dBr
		14 GHz	-7.25 dBm		-2.75 dBı
		$16\mathrm{GHz}$	-7.25 dBm		-2.75 dBi
		18 GHz	-7.25 dBm		-2.75 dBı
	-10 dBm (0 dB range)	2 GHz	-11.75 dBm		−8.25 dBr
		4 GHz	-11.75 dBm		-8.25 dBı
		6 GHz	-11.75 dBm		-8.25 dBı
		8 GHz	-12.00 dBm		-8.00 dBr
		10 GHz	-12.00 dBm		-8.00 dBr
		12 GHz	-12.00 dBm		-8.00 dBr
		14 GHz	-12.25 dBm		-7.75 dBr
		16 GHz	-12.25 dBm		-7.75 dBr
		18 GHz	-12.25 dBm		-7.75 dBr
	-10 dBm (-10 dB range)	$2\mathrm{GHz}$	-12.25 dBm		−7.75 dBr
	To distill (To distribution)	4 GHz	-12.25 dBm	**************************************	-7.75 dBr
.		6 GHz	-12.25 dBm	#. A. M. A. M. M. A. M.	-7.75 dBr
		8 GHz	-12.50 dBm		-7.50 dBi
		10 GHz	-12.50 dBm	45.000 A 100 A	-7.50 dBr
Î		12 GHz	-12.50 dBm		-7.50 dBr
		14 GHz	-12.85 dBm		-7.35 dBr
		14 GHz 16 GHz	-12.85 dBm		-7.15 dBr -7.15 dBr
		18 GHz	-12.85 dBm		-7.15 dBr
	-20 dBm (-20 dB range)	2 GHz	-22.45 dBm		-17.55 dB
	20 dDin (20 dD range)	4 GHz	-22.45 dBm		-17.55 dB
		6 GHz	-22.45 dBm	#*************************************	-17.55 dB
		8 GHz	-22.45 dBm		-17.30 dB
		10 GHz	-22.70 dBm		-17.30 dB
		10 GHz 12 GHz	-22.70 dBm -22.70 dBm		
		12 GHz 14 GHz			-17.30 dB
			-23.05 dBm		-16.95 dB
		16 GHz 18 GHz	-23.05 dBm -23.05 dBm		-16.95 dB -16.95 dB

HP 8671B Performance Tests

Table 4-4. Performance Test Record (4 of 6)

Para. No.	Test	Results			
		Min.	Actual	Max.	
4-10.	LOW LEVEL ACCURACY				
	2.0 GHz				
		-30 dBm	-32.65 dBm		-27.35 dBm
		$-40~\mathrm{dBm}$	-42.95 dBm		-37.05 dBm
		-50 dBm	-53.25 dBm		-46.75 dBm
		-60 dBm	-63.55 dBm		-56.45 dBm
		$-70~\mathrm{dBm}$	-73.85 dBm	***************************************	-66.15 dBn
		$-80~\mathrm{dBm}$	-84.15 dBm		-75.85 dBm
		$-90~\mathrm{dBm}$	-94.45 dBm		-85.55 dBm
		$-100~\mathrm{dBm}$	-104.75 dBm		−95.25 dBn
		-110 dBm	-115.05 dBm		-104.95 dBm
	10.0 GHz				
	A STO STANK	$-30~\mathrm{dBm}$	-32.90 dBm		-27.10 dBm
	William Control of the Control of th	-40 dBm	-43.20 dBm		-36.80 dBm
	As a Constant	-50 dBm	-53.50 dBm		-46.50 dBm
		-60 dBm	-63.80 dBm		-56.20 dBm
	reportation of the contract of	-70 dBm	-74.10 dBm		-65.90 dBm
		-80 dBm	-84.40 dBm		-75.60 dBm
		-90 dBm	-94.70 dBm		-85.30 dBm
		-100 dBm	-105.00 dBm		−95.00 dBm
		-110 dBm	-105.30 dBm		-104.70 dBm
	18.0 GHz		and a constant		
	10.0 0112	-30 dBm	-33.45 dBm		-26.55 dBm
		-40 dBm	-43.85 dBm		-36.15 dBn
		-50 dBm	-54.25 dBm		-45.75 dBn
		-60 dBm	-64.65 dBm		-55.35 dBn
		-70 dBm	-75.05 dBm	property against the first state of the first state	-64.95 dBm
		-80 dBm	-85.45 dBm		-74.55 dBn
		-90 dBm	-95.95 dBm		-84.15 dBn
		-100 dBm	-106.35 dBm		-93.75 dBn
		-110 dBm	-107.75 dBm		-103.35 dBn
4-11.	OUTPUT LEVEL SWITCHING T	IME			
		<20 ms			20 ms
4-12.	HARMONICS, SUBHARMONICS	, AND MULTIPLES			
	Fundamental	Harmonic or Subharmonic			
	-		Linavana		
	$2.000000~\mathrm{GHz}$	4.000000 GHz 2f			-25 dBc
	4.000000 GHz	8.000000 GHz 2f			-25 dBc
	$6.000000~{ m GHz}$	12.000000 GHz 2f			−25 dBe

Performance Tests HP 8671B

Table 4-4. Performance Test Record (5 of 6)

_			Results		
Para. No.		Test		Actual	Max.
4-12.	HARMONICS, SUBHARMO	NICS, AND MULTIPLES (cont'd)			-25 dBc -26 dBc -70 dBc
		Harmonic or			
	Fundamental	Subharmonic			
	8.000 000 GHz	16,000 000 GHz 2f		- Alexandra de la company	
	8.000 000 GHz	4.000 000 GHz 1/2f			
	$10.000~000~{ m GHz}$	20.000 000 GHz 2f			
	10.000 000 GHz	5.000 000 GHz 1/2f			
	11.000 000 GHz	22.000 000 GHz 2f			
	11.000 000 GHz	5.500 000 GHz 1/2f			−25 dBc
	14.000 000 GHz	4.666 667 GHz 1/3f		**************************************	$-25\mathrm{dBe}$
	14.000 000 GHz	9.333 333 GHz 2/3f			
	16.000 000 GHz	5.333 333 GHz 1/3f			
	16.000 000 GHz	10.666 667 GHz 2/3f			
	18.000 000 GHz	6.000 000 GHz 1/3f			
	18.000 000 GHz	12.000 000 GHz 2/3f			−25 dBe
4-13.	NON-HARMONICALLY RELATED SPURIOUS SIGNALS [CW AND AM MODES]				
	Carrier	Spurious Signal		Spurious Signal	
	Frequency	Frequency		Level	
	2.0 to 6.2 GHz				
	$3000\mathrm{MHz}$			•	$-70~\mathrm{dBc}$
					$-70~\mathrm{dBc}$
				Assessment & Assessment Application Stranger on Paper Security	$-70~\mathrm{dBc}$
					$-70~\mathrm{dBc}$
					-70 dBc
		**************************************		,	$-70~\mathrm{dBc}$
4-14.	POWER LINE RELATED SPU	RIOUS SIGNALS			
		Offset Frequency			
	2.0—6.2 GHz				
	<300 Hz offset				$-50~\mathrm{dBc}$
					$-60~\mathrm{dBc}$
	300 Hz—1 kHz offset		1		
	300 Hz—1 kHz offset >1 kHz offset				−65 dBc
					−65 dBc
	>1 kHz offset				−65 dBc −44 dBc
	>1 kHz offset 6.2—12.4 GHz			***************************************	
	>1 kHz offset 6.2—12.4 GHz <300 Hz offset				-44 dBc
	>1 kHz offset 6.2—12.4 GHz <300 Hz offset 300 Hz—1 kHz offset >1 kHz offset				–44 dBc –54 dBc
	>1 kHz offset 6.2—12.4 GHz <300 Hz offset 300 Hz—1 kHz offset				–44 dBc –54 dBc
	>1 kHz offset 6.2—12.4 GHz <300 Hz offset 300 Hz—1 kHz offset >1 kHz offset 12.4—18.0 GHz				-44 dBc -54 dBc -59 dBc
	>1 kHz offset 6.2—12.4 GHz <300 Hz offset 300 Hz—1 kHz offset >1 kHz offset 12.4—18.0 GHz <300 Hz offset				-44 dBc -54 dBc -59 dBc

Table 4-4. Performance Test Record (6 of 6)

Para.	Test		Results		
No.	1 291	Min.	Actual	Max.	
4-14.	SINGLE-SIDEBAND PHASE NOISE				
	10 Hz offset from carrier 6100 MHz			-58 dBc	
	12 200 MHz			-52 dBc	
	$18~000~\mathrm{MHz}$			-48 dBc	
	100 Hz offset from carrier 6100 MHz			-70 dBc	
	12 200 MHz			-64 dBc	
	18 000 MHz			-60 dBc	
	1 kHz offset from carrier 6100 MHz			-78 dBc	
	12 200 MHz			-72 dBc	
	$18\ 000\ \mathrm{MHz}$			-68 dBc	
	10 kHz offset from carrier 6100 MHz			-86 dBc	
	$12\ 200\ \mathrm{MHz}$			-80 dBc	
	$18000\mathrm{MHz}$			-76 dBc	
	100 kHz offset from carrier 6100 MHz		***************************************	-110 dBc	
	$12\ 200\ \mathrm{MHz}$			-104 dBd	
	$18000~\mathrm{MHz}$		MARINE AND A VALUE OF THE PARTY	-100 dBc	
I-15.	INTERNAL TIME BASE AGING RATE			5 x 10 ⁻¹⁰ /da	

	j